


POP-UP CANOPY TENT

Instruction Manual

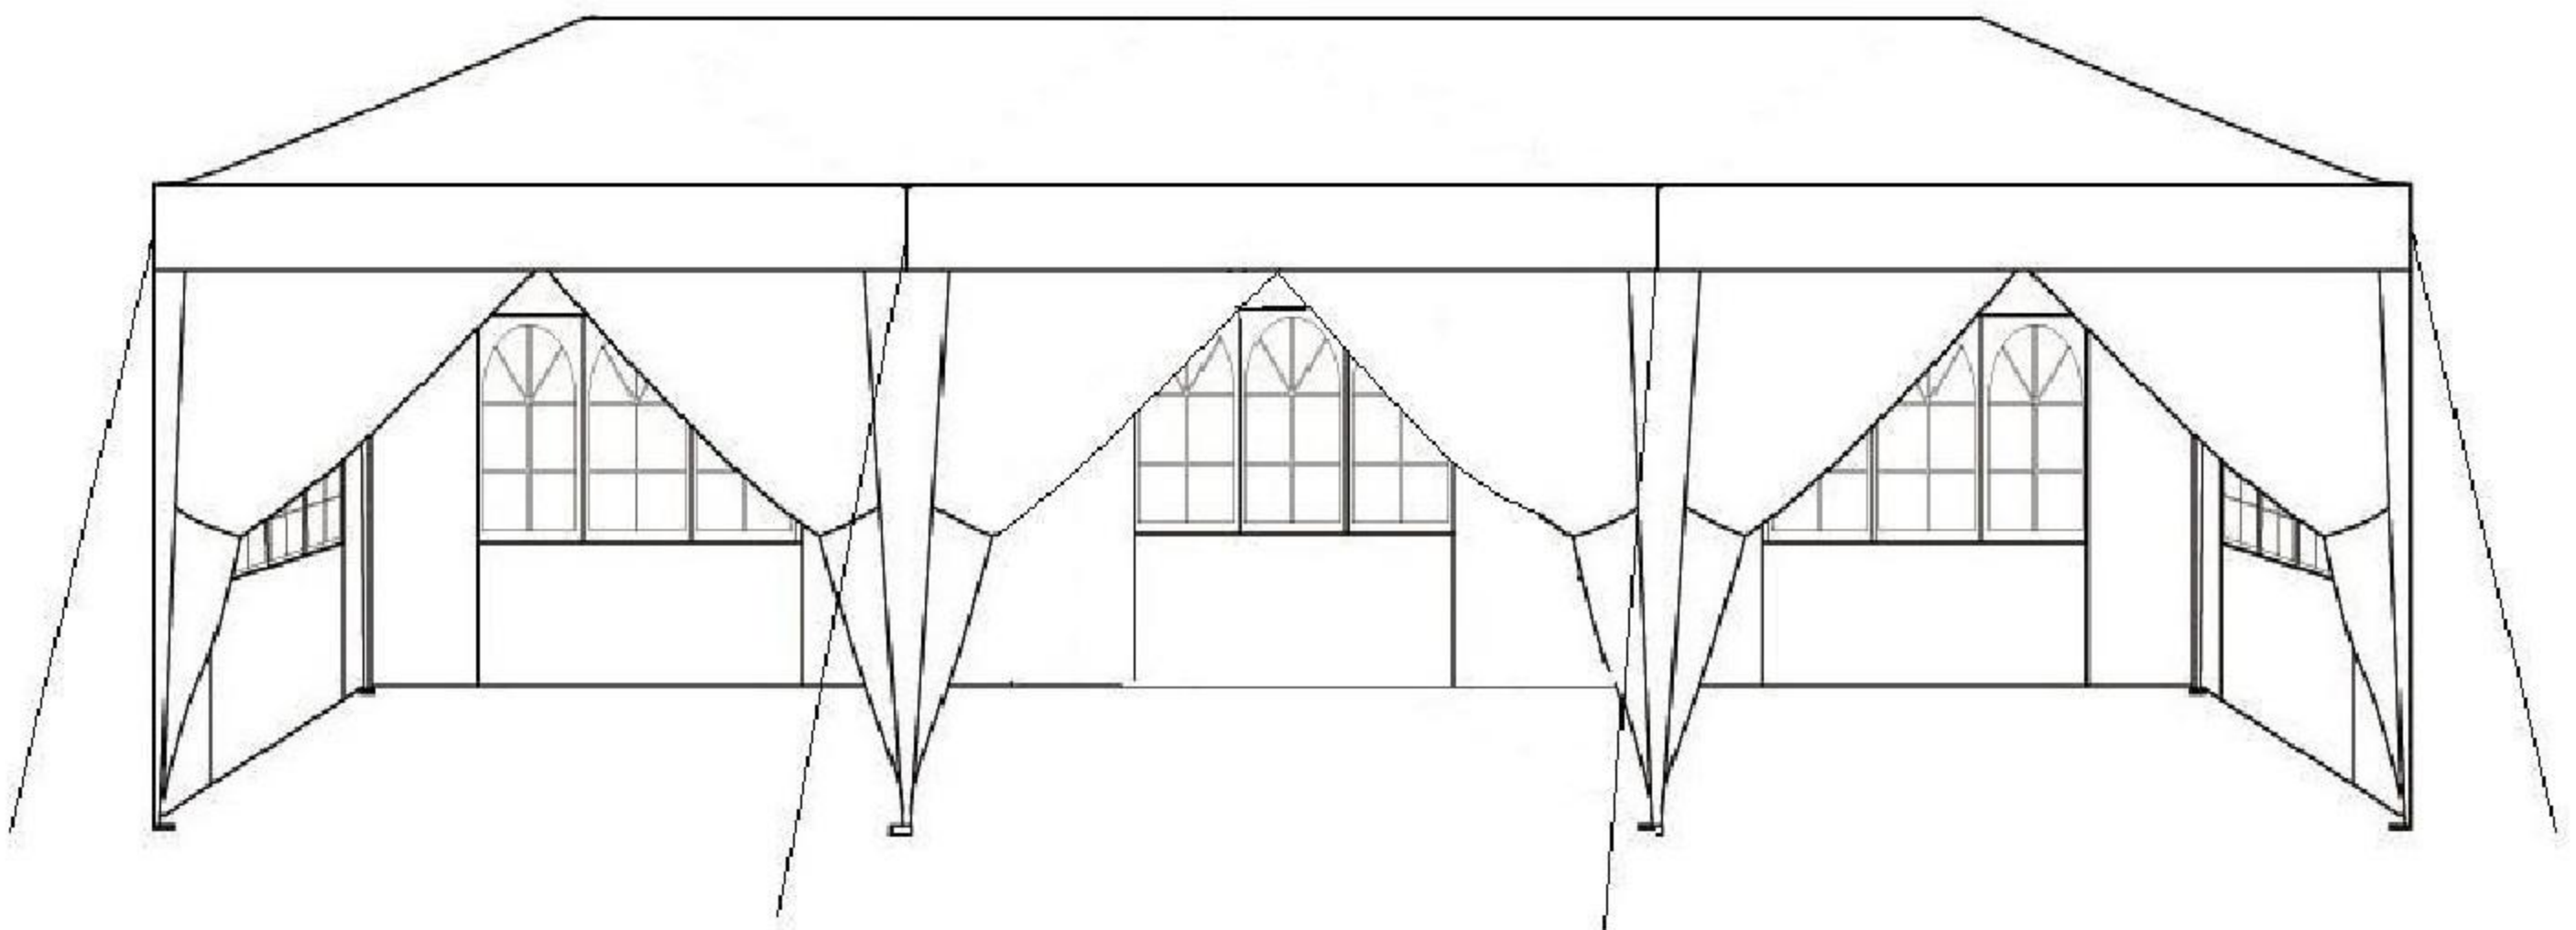


Note: Do not use this product in strong wind, rain or snow. We do not undertake the warranty for damage caused by improper use.

Read Before Assembly


1. Upon opening of the package, please check that all parts are included and that no damage has occurred during shipping. Please kindly note that, in order to ensure that the product arrives in good condition and avoid possible damage or deformation during transportation, we have reinforced the packaging.
2. Please read the instructions carefully before assembly. Be careful not pinching your fingers when setting up or shutting down the canopy.
3. Please set up the canopy with two or more people.
4. Keep this product away from flame or heat sources. Do not cook, use fire-pits, use outdoor heaters, ignite fireworks under or close to the canopy.
5. Do not set up or use the canopy when there is heavy wind, raining or storm.
6. Please check all fixings regularly and re-tighten as necessary to ensure safety.
7. If you have any inquiry or need more help for our product and services, please contact our customer support via your account. [Click here to contact us](#)

Parts


Canopy Frame×1pc

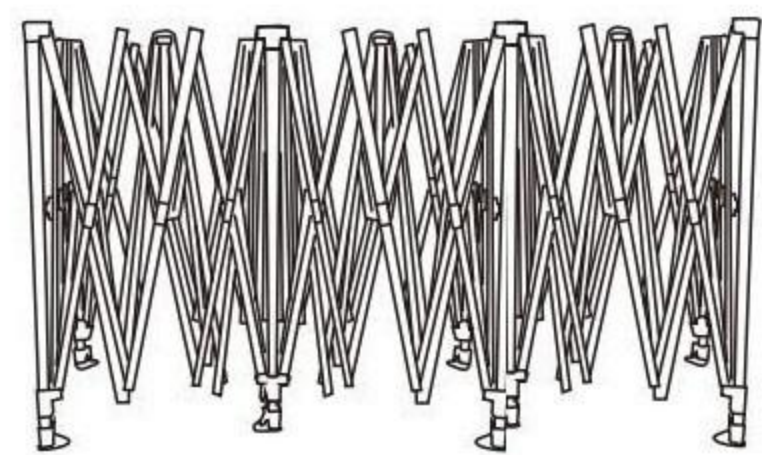


Canopy Top×1pc

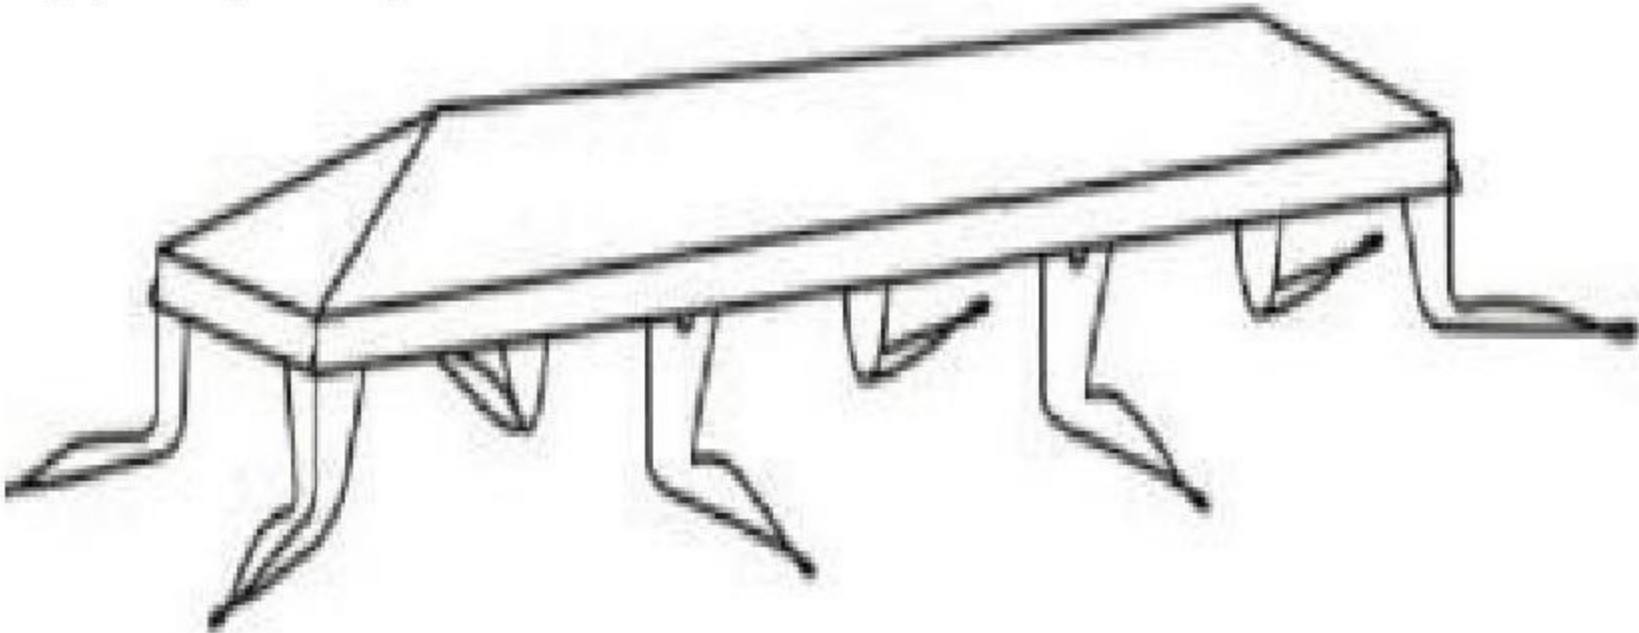


Bag×1pc

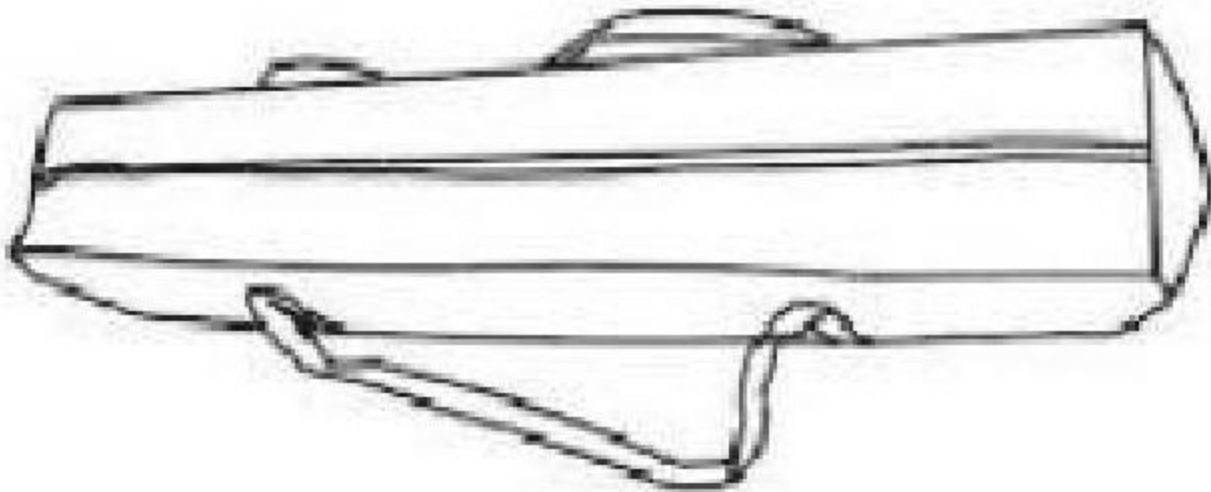


Tent Stake×16pcs

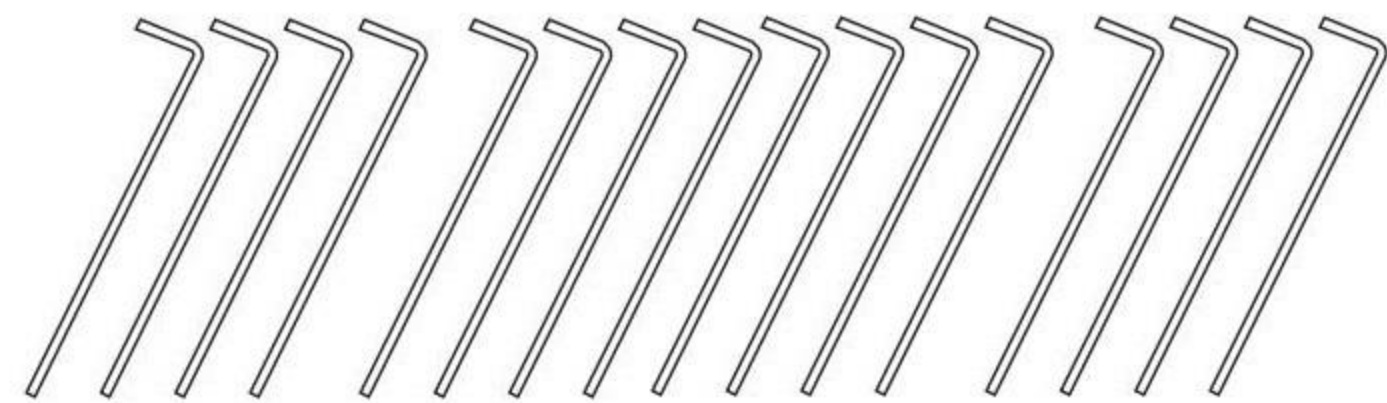


Rope×8pcs

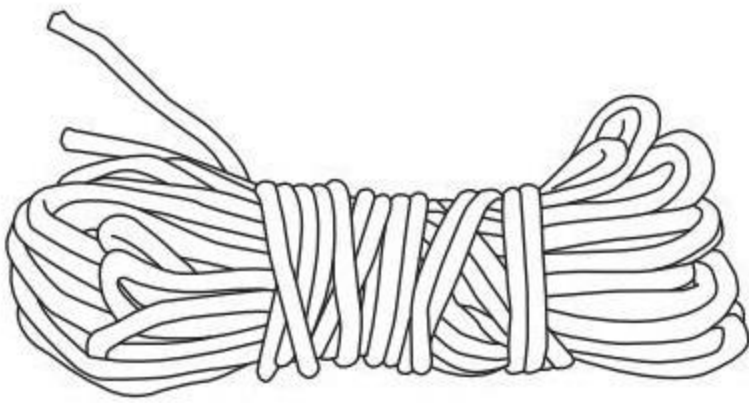

Sidewall with Zipper×3pcs

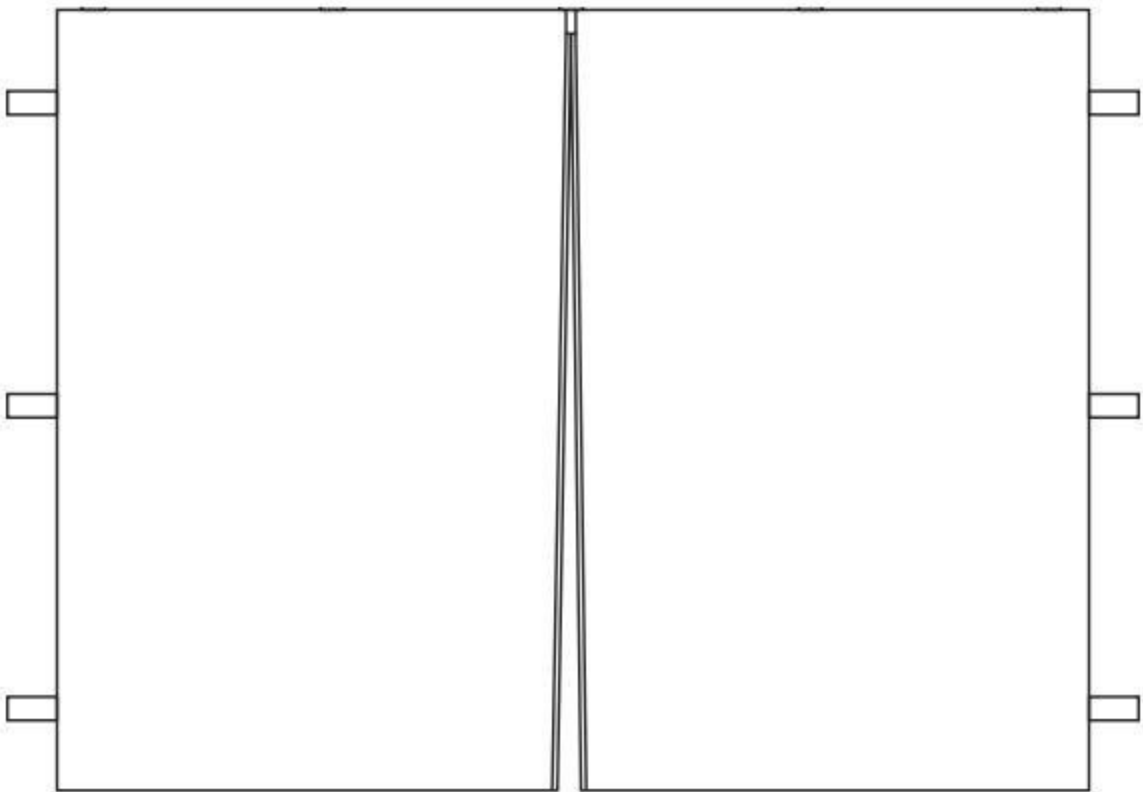


Sidewall with Window ×5pcs

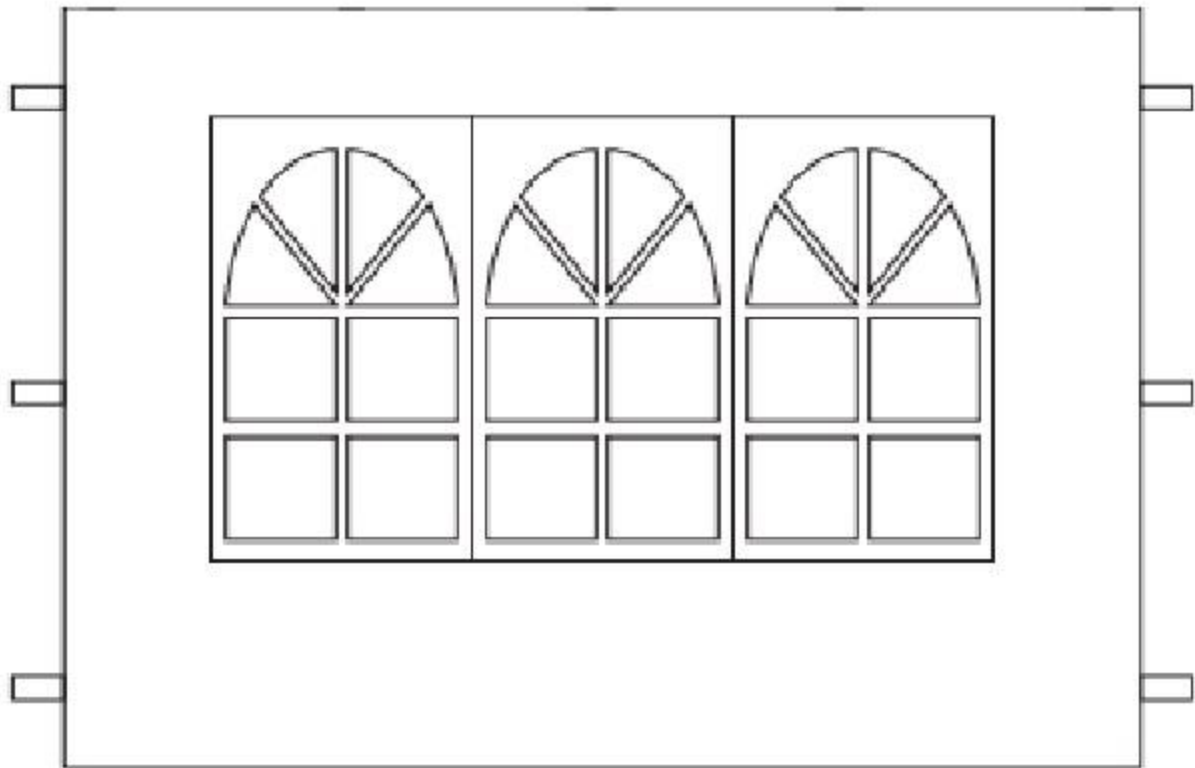

Setting Up the Canopy


1、 UNFOLDING THE FRAME AJAR

- Unfold the frame ajar by pulling the frame from each end.

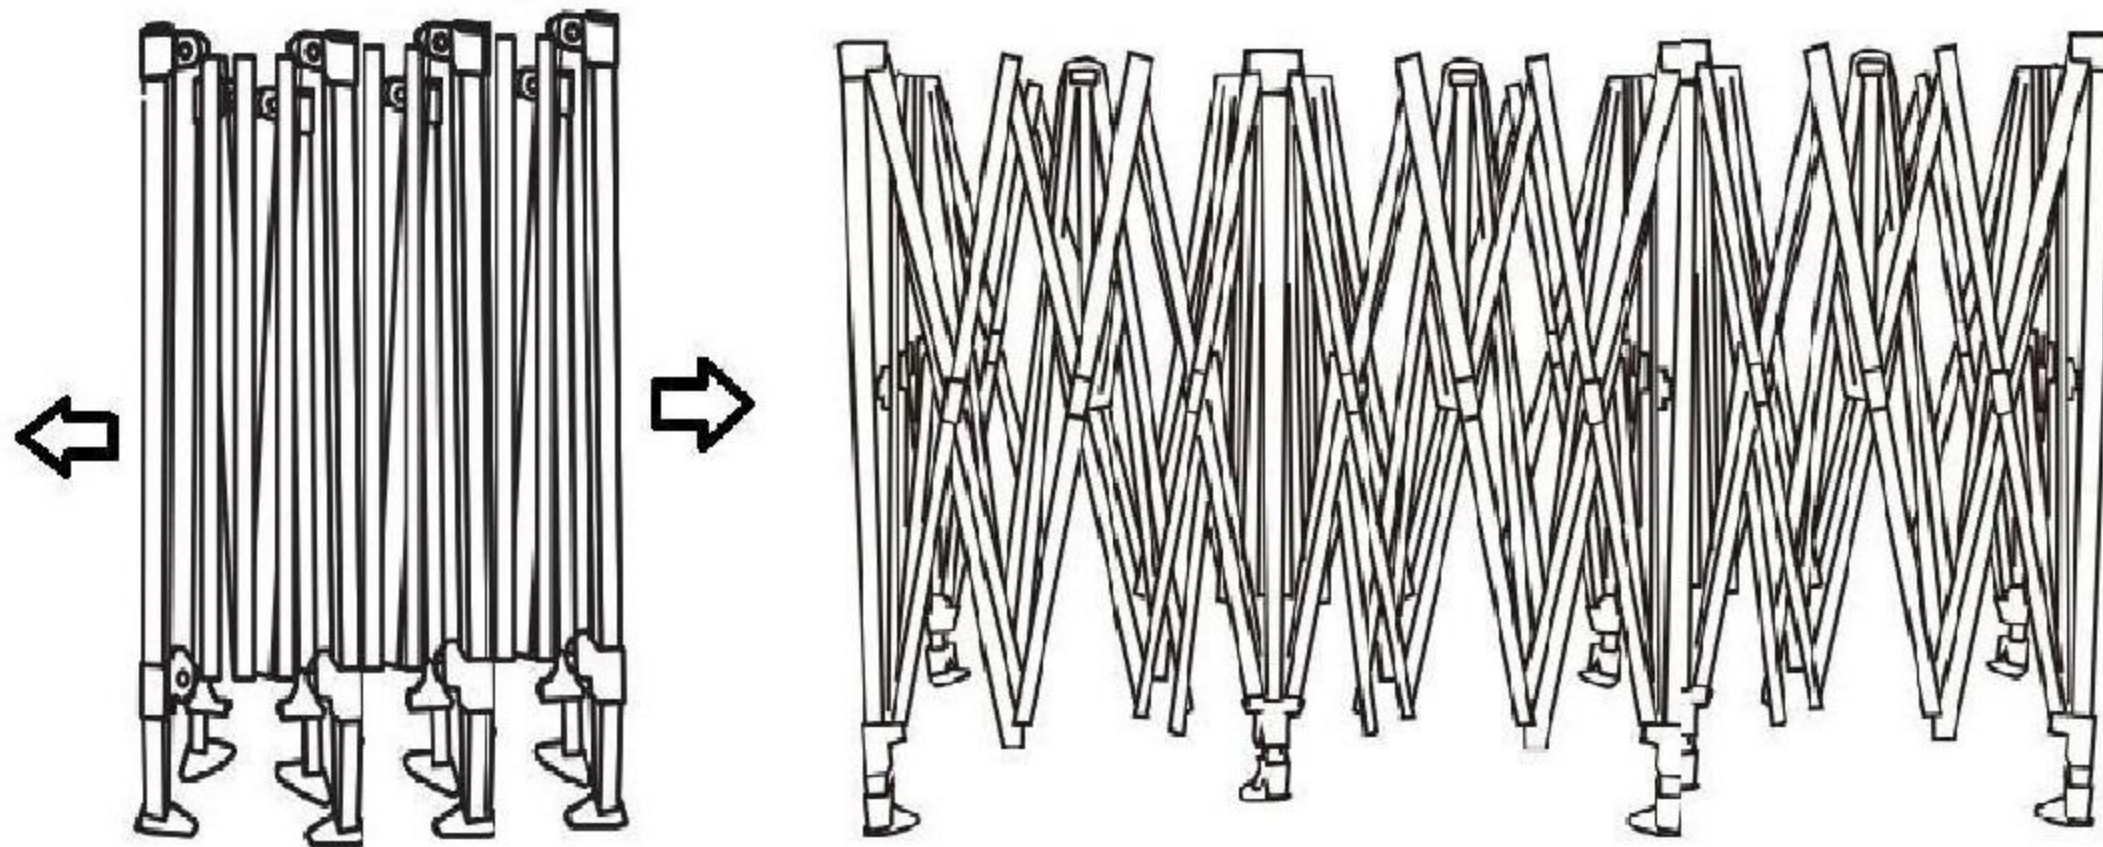


2、 ATTACHING THE CANOPY TOP

- Unfold the sheet of fabric and place it on top of the frame.
- Secure the canopy top to the corners of the canopy frame using the Velcro connections.

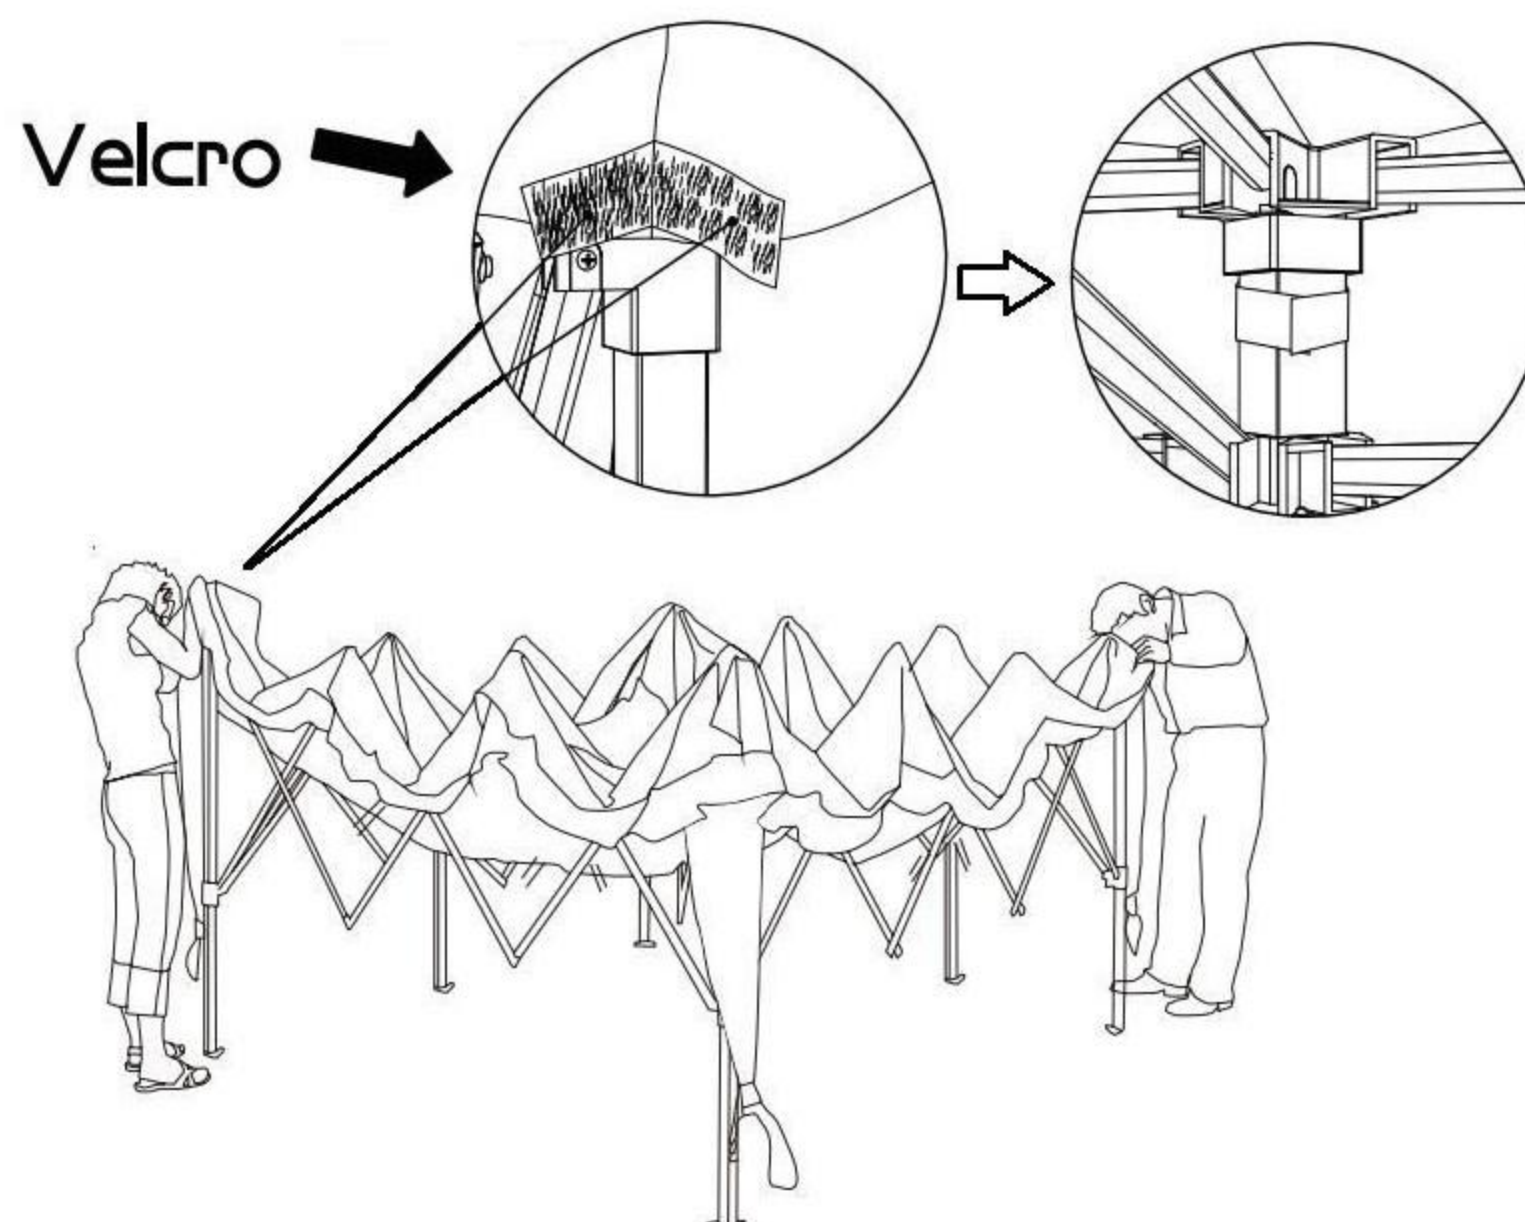


3、UNFOLDING THE FRAME FULLY

- From under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.
- Finish attaching the large canopy inside the canopy frame using the Velcro loops.

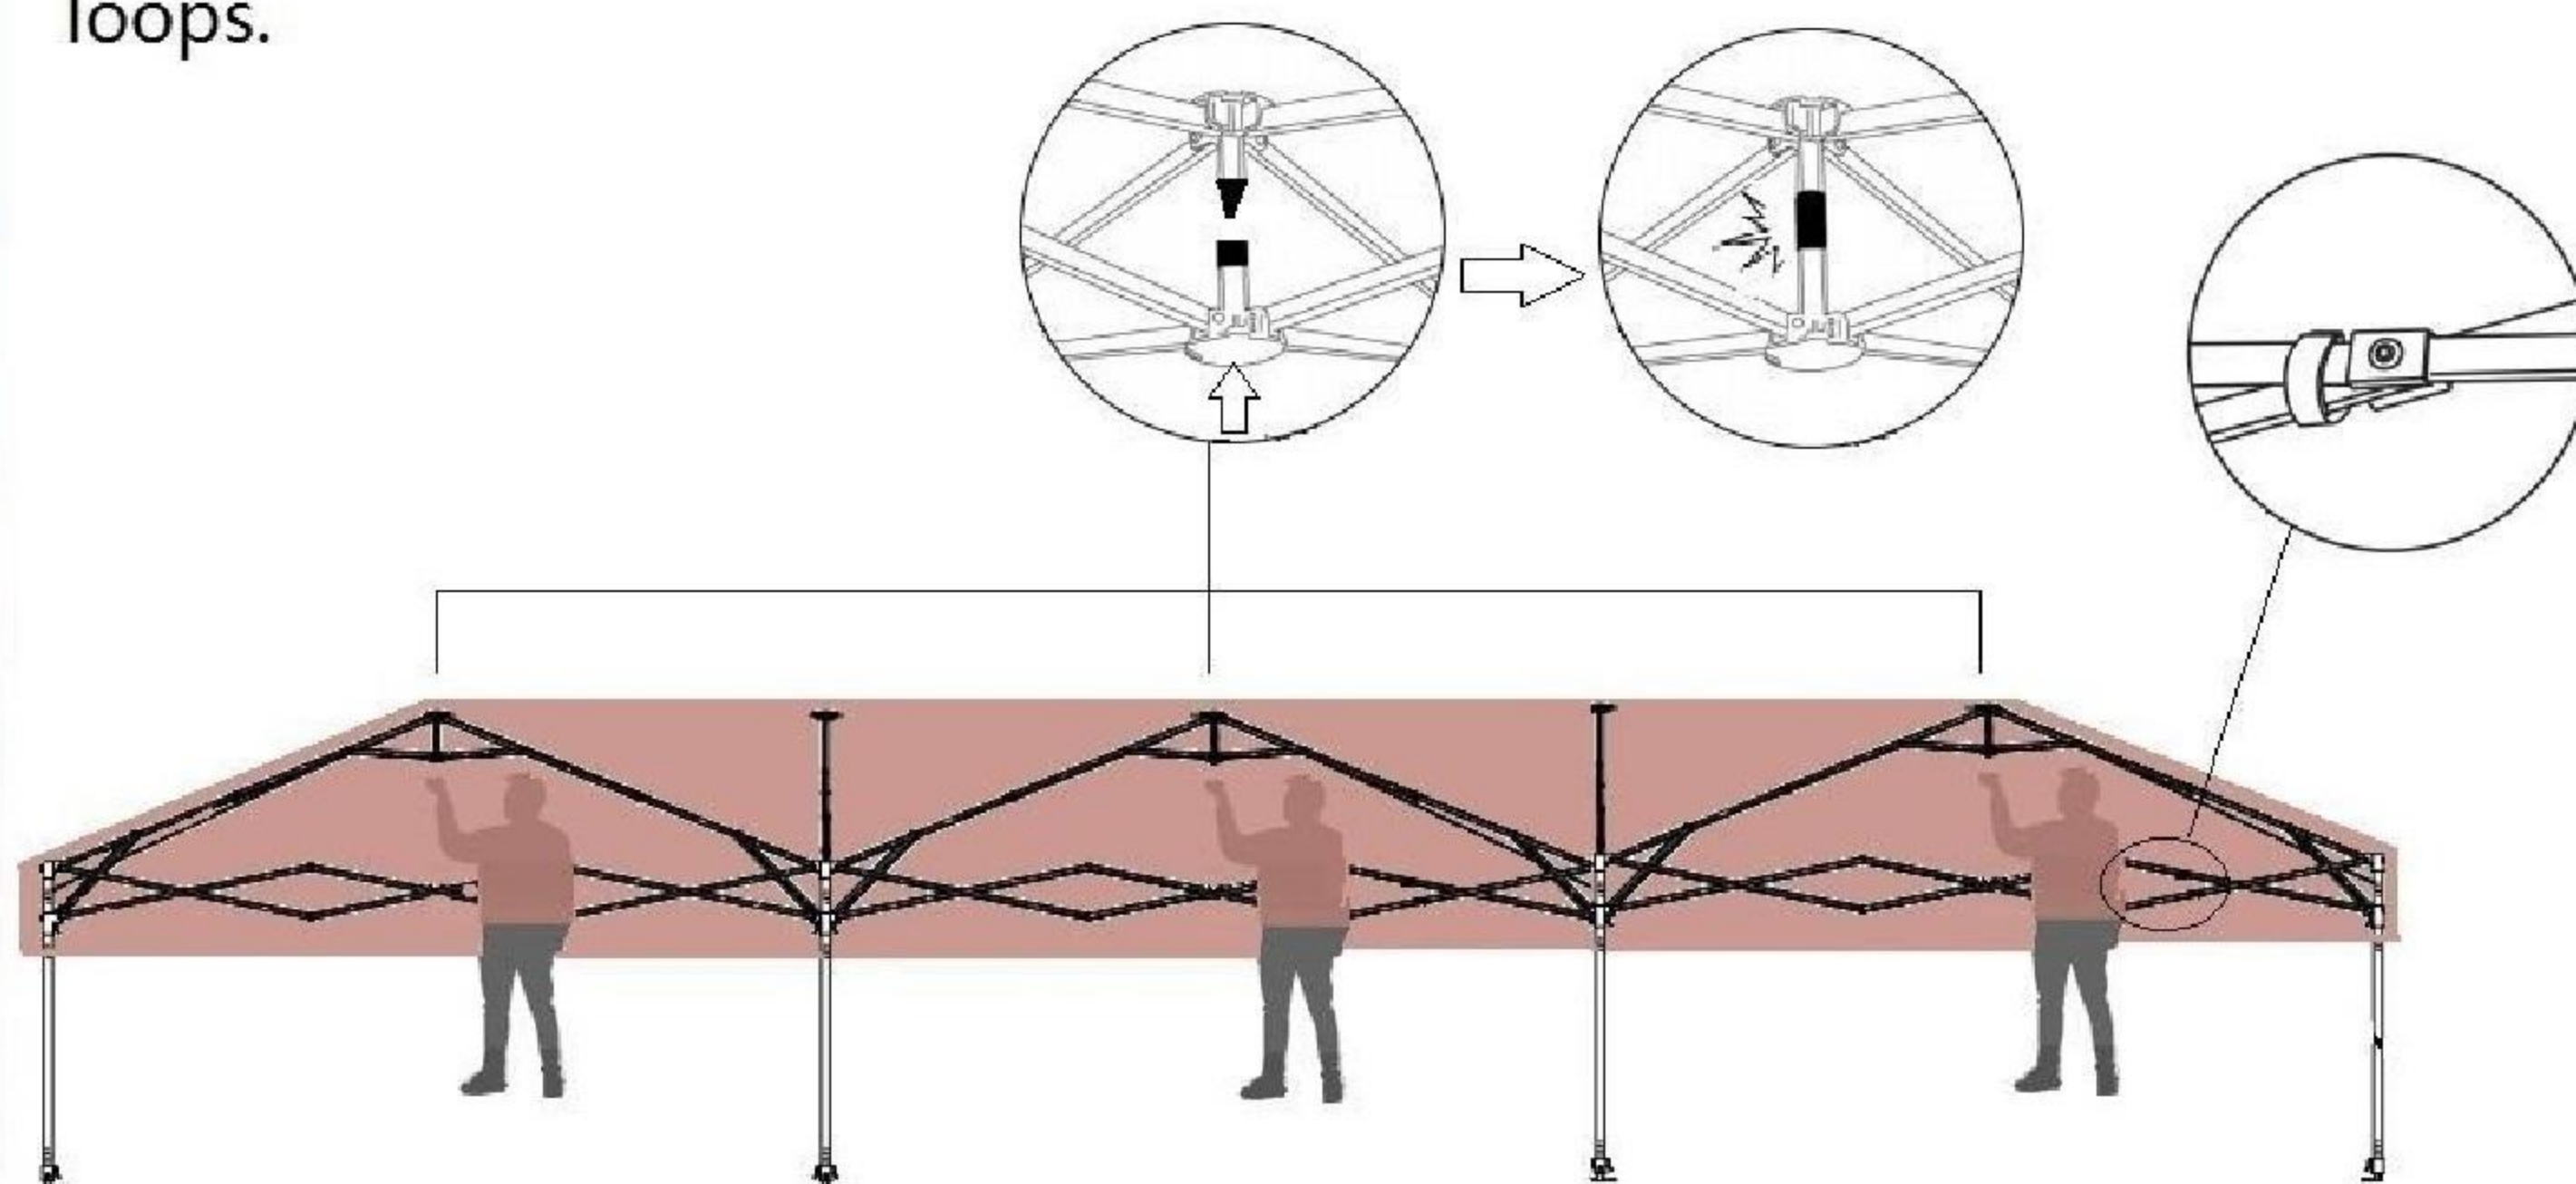


4、ADJUSTING THE CANOPY HEIGHT

- There are three height adjustment holes in the inner leg. Press the button on each leg and raise or lower the height of the canopy.
- Attach the iron hooks to the legs of the frame.

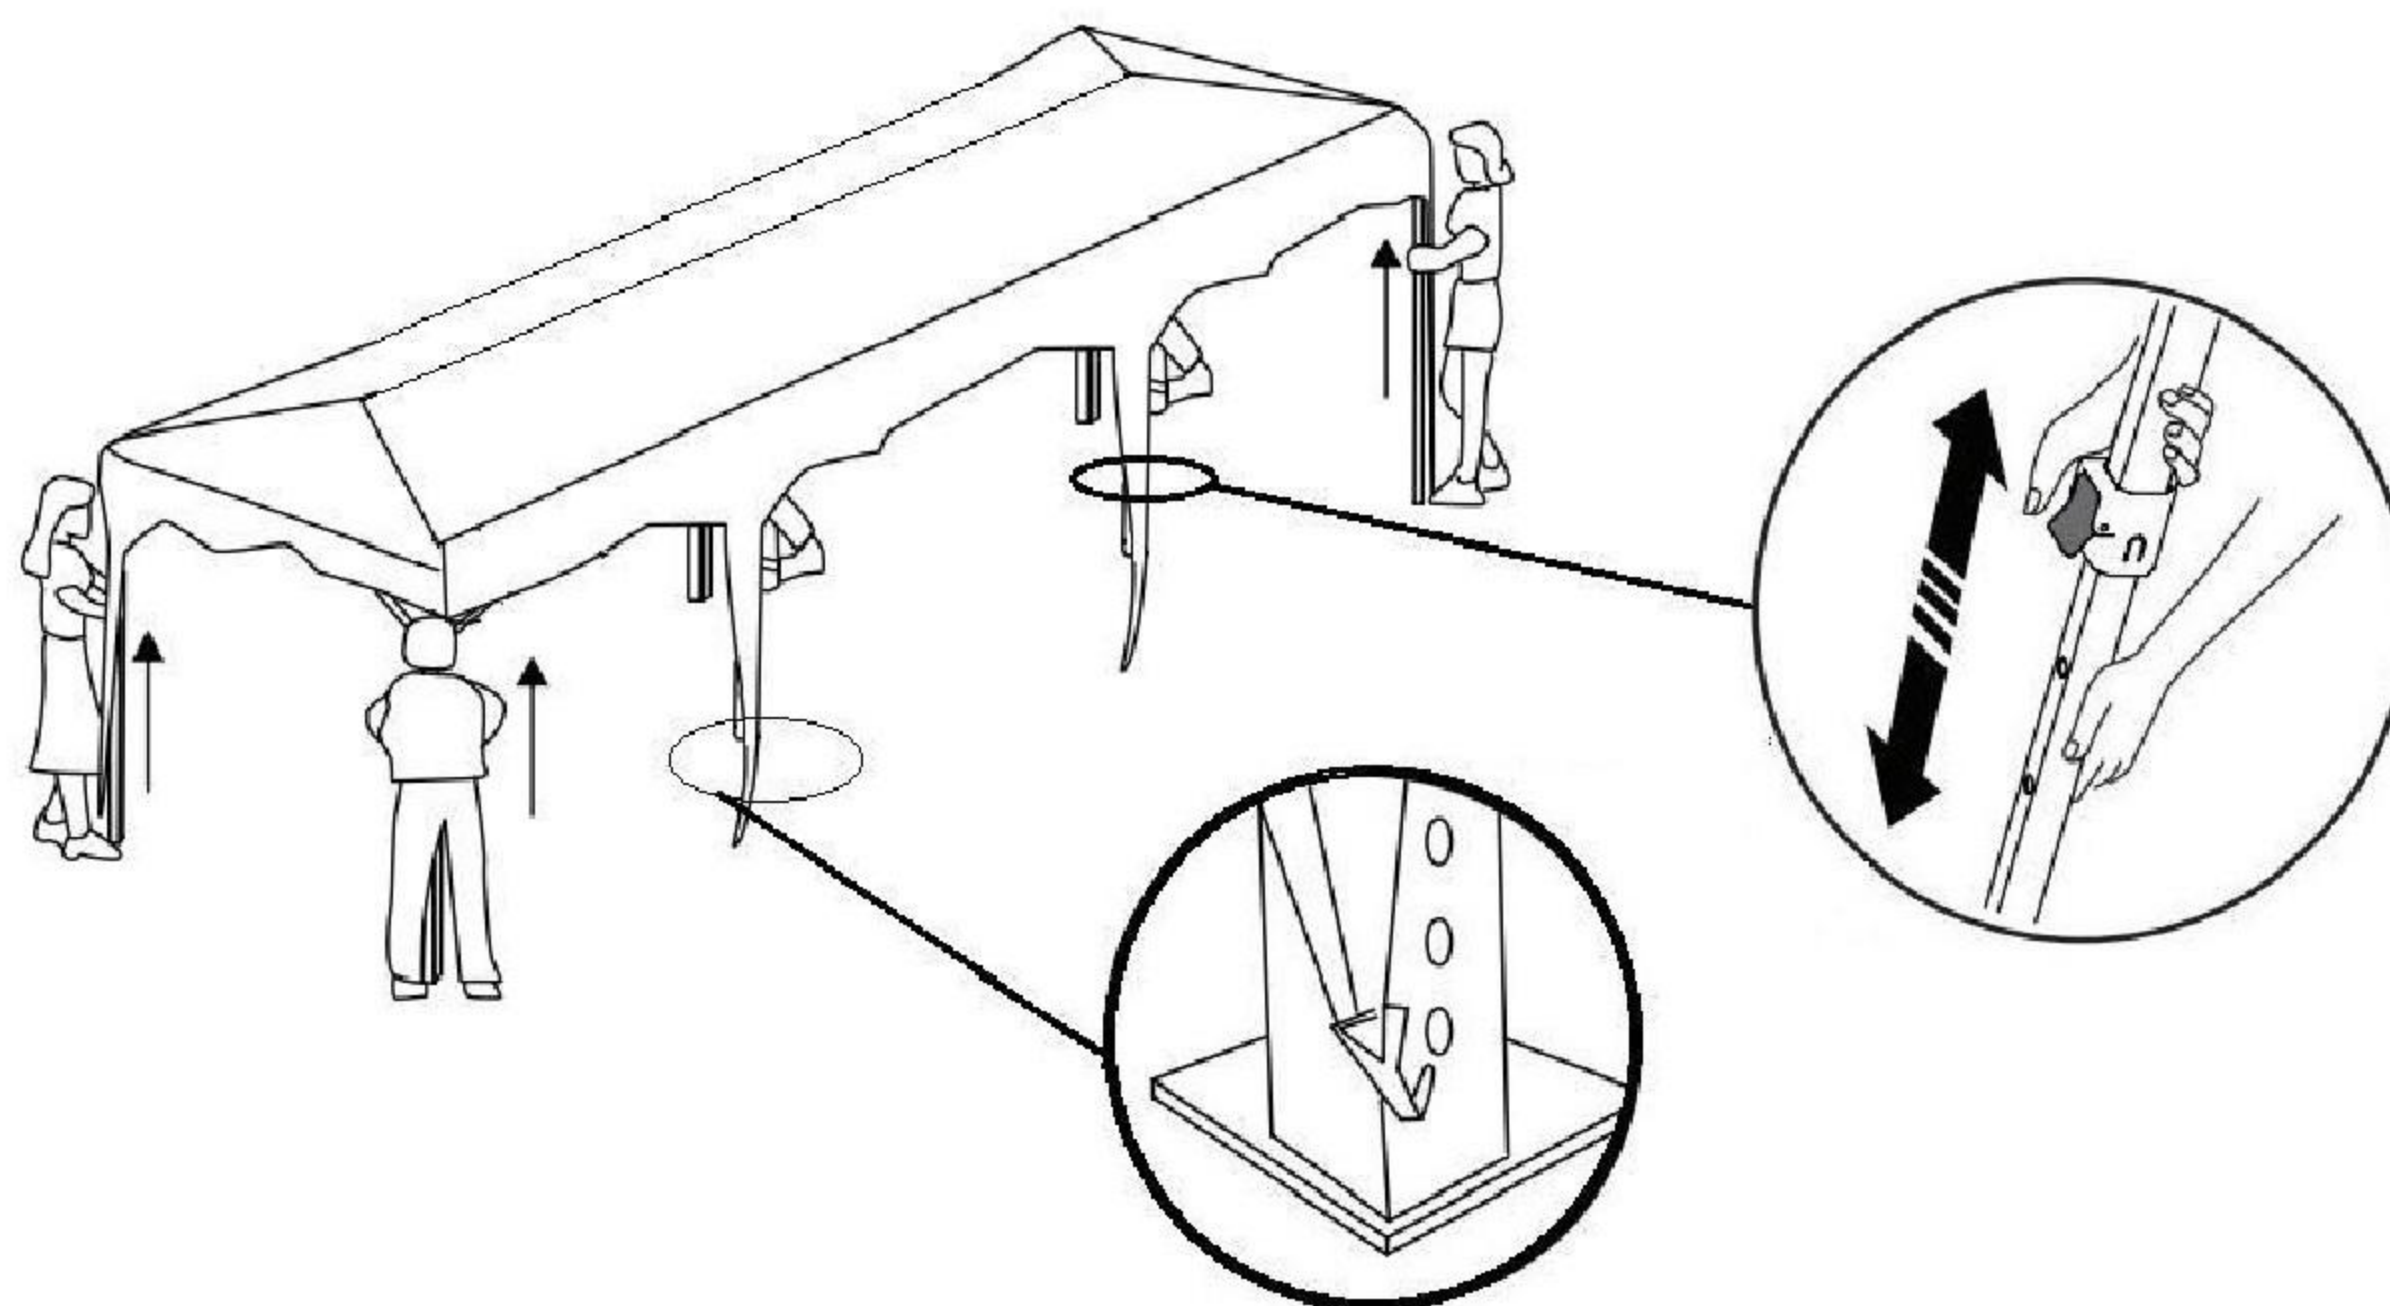


5、ATTACHING THE CURTAIN

- Attach the sidewalls by tying up the Velcro straps around the frame of the canopy. Do not tie the Velcro too tight.

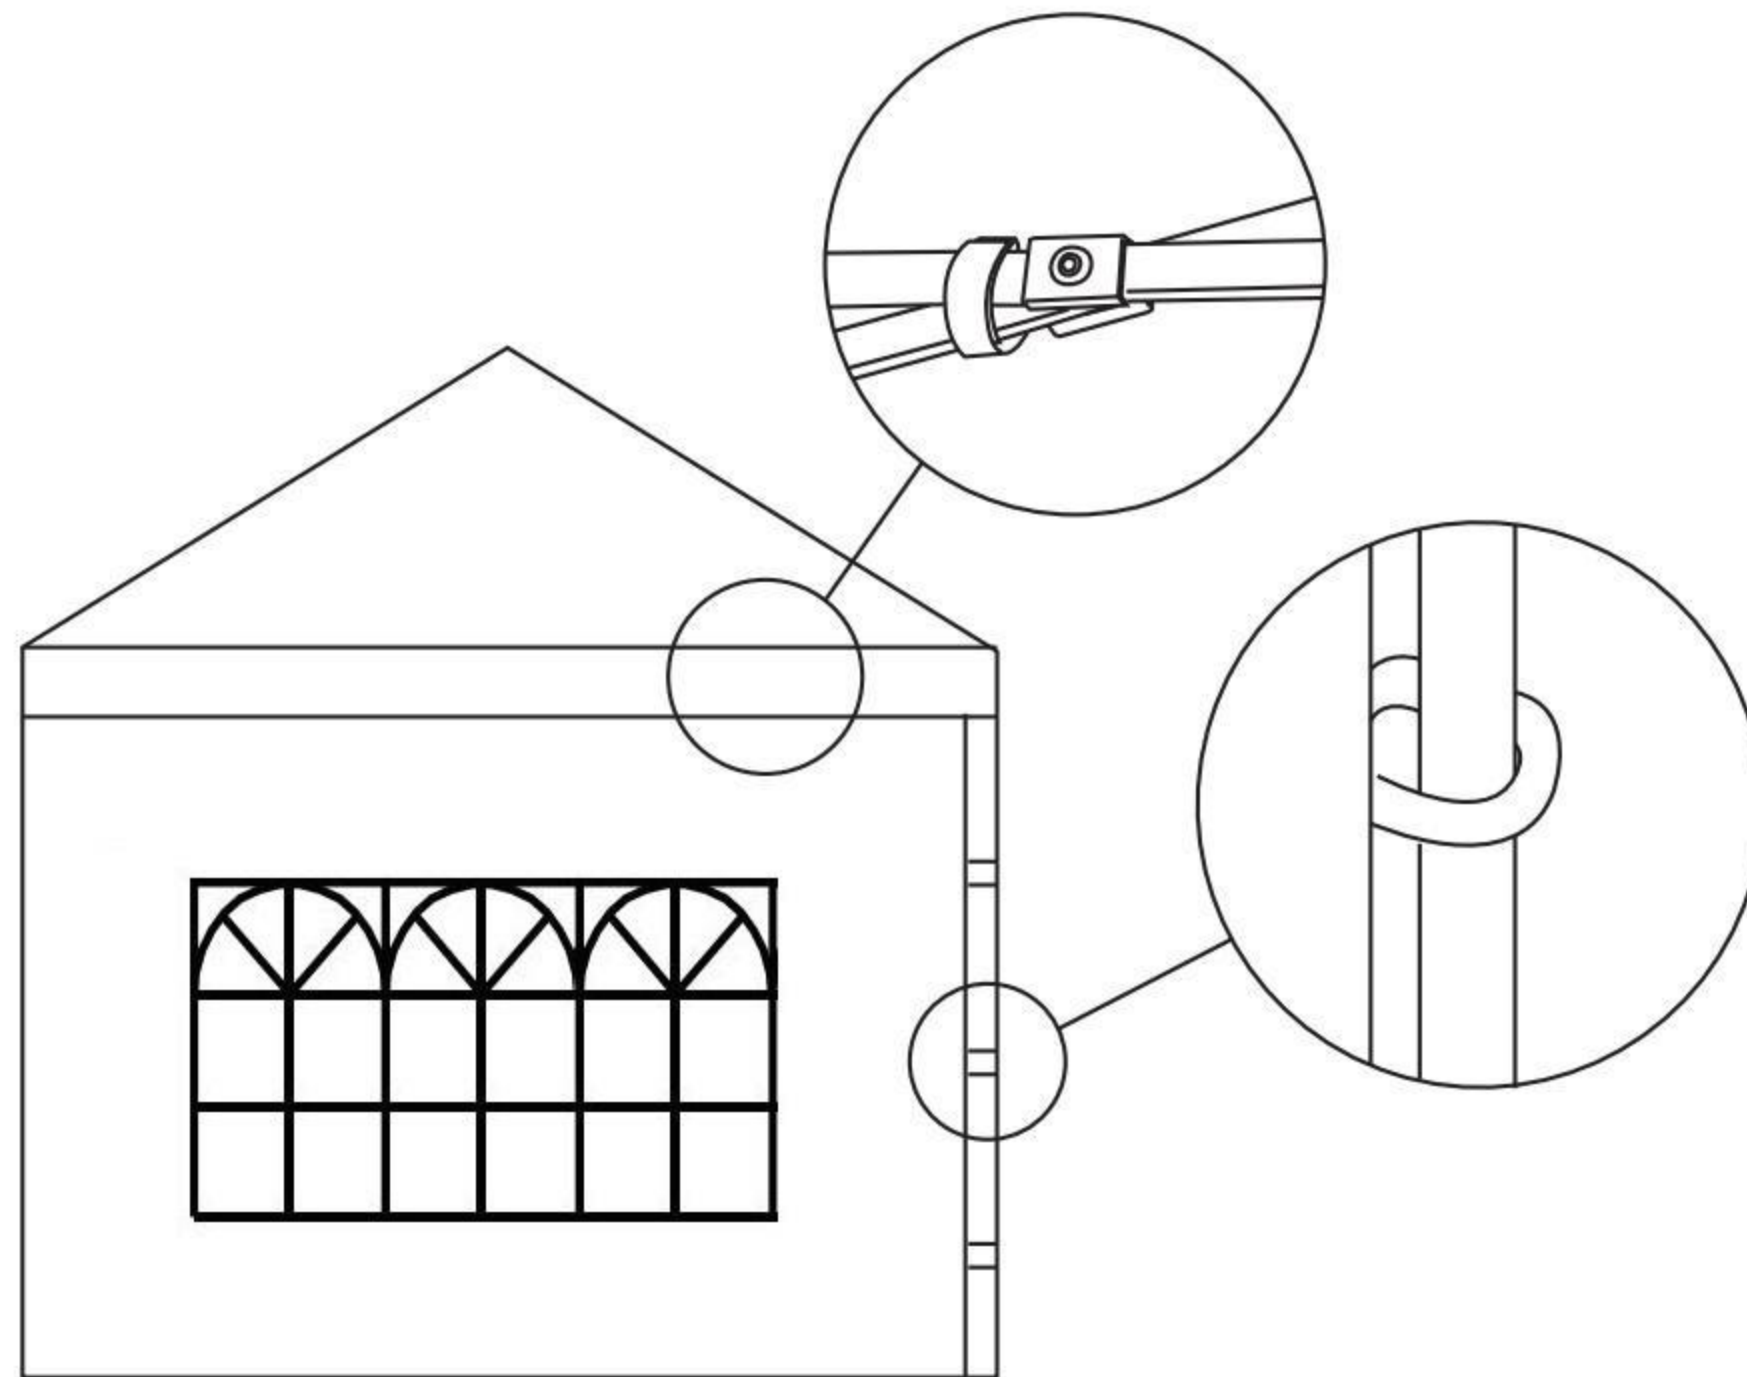

6、SECURING THE CANOPY IN PLACE



- Insert a stake into the foot of each canopy leg.
- Secure stakes to the ground at a proper distance from the canopy. Tie the canopy's ropes to the stakes. Ensure appropriate tension on the rope.

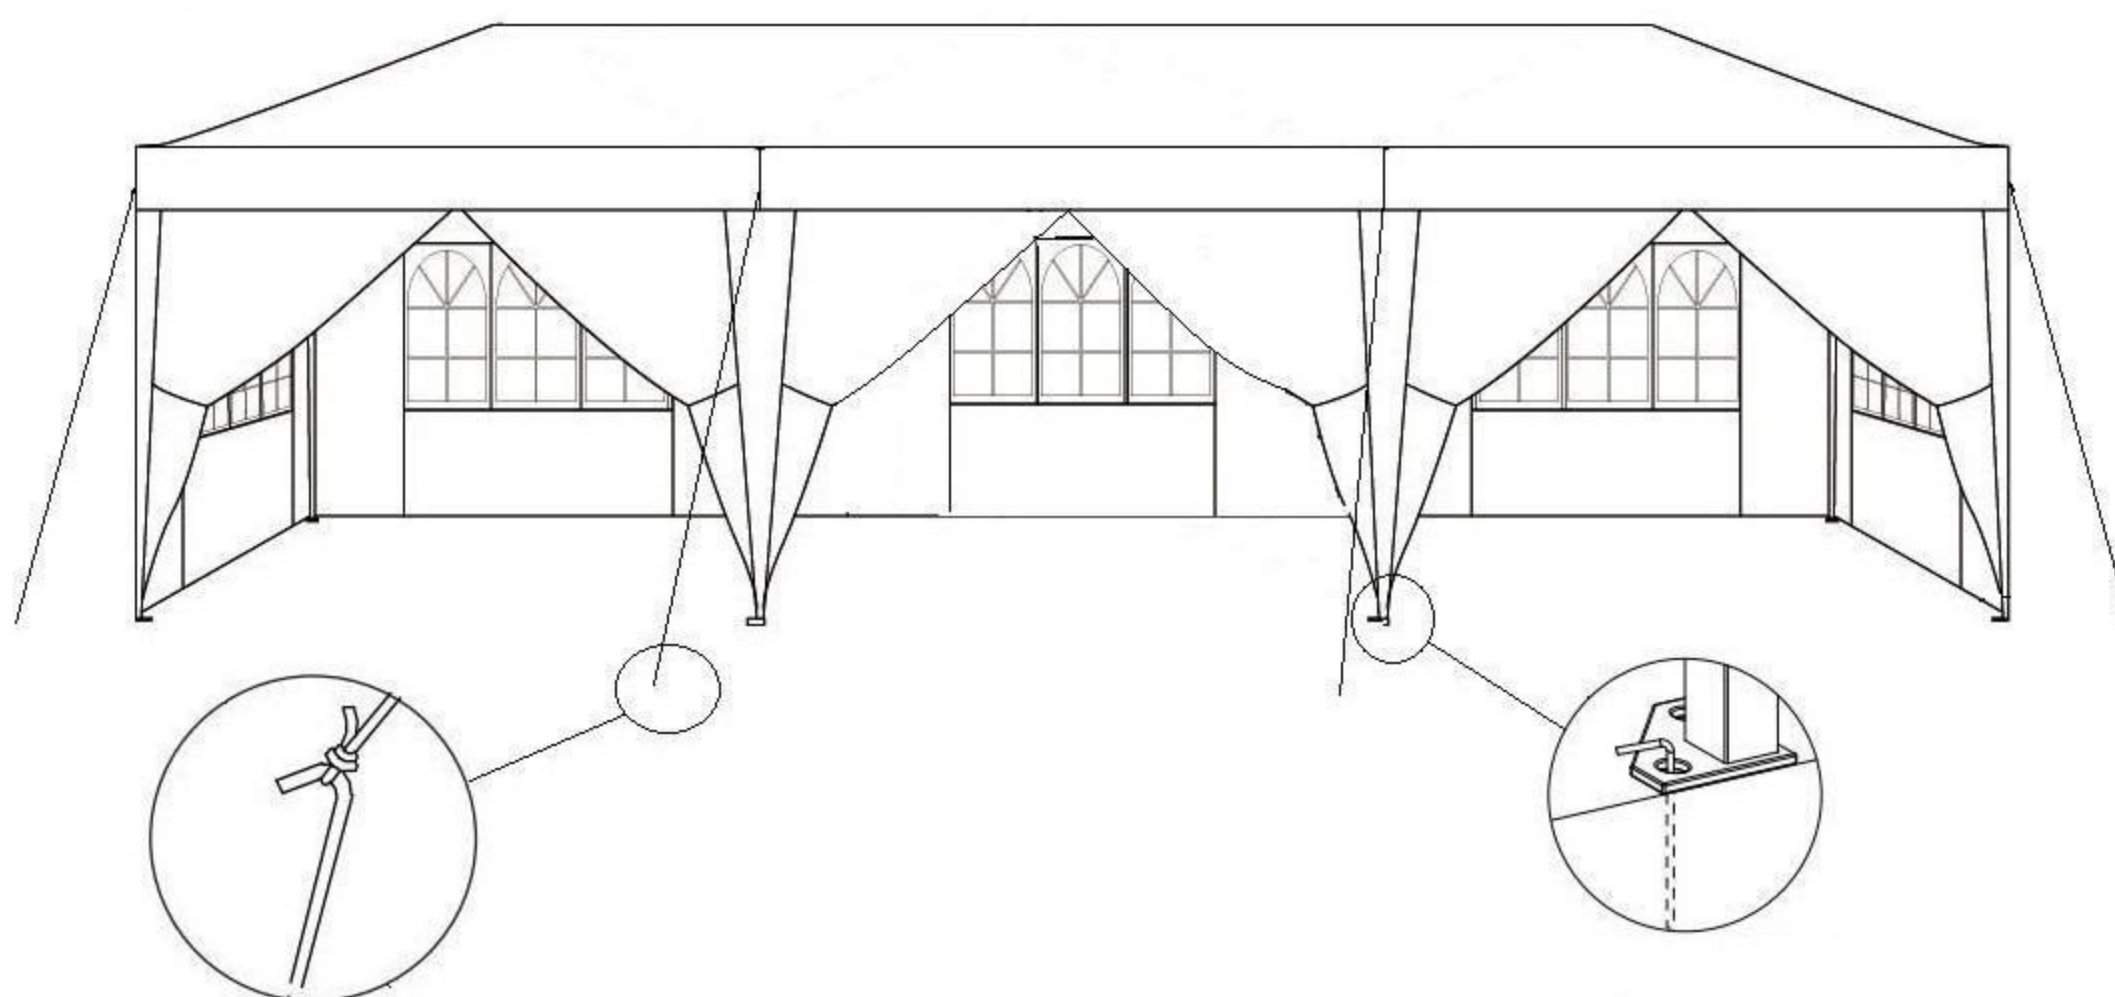

Taking Down the Canopy


1. REMOVING THE STAKES AND RETRACT THE LEGS

- pull the stakes from the ground.
- Press the push button on each leg and retract the legs to their original height.

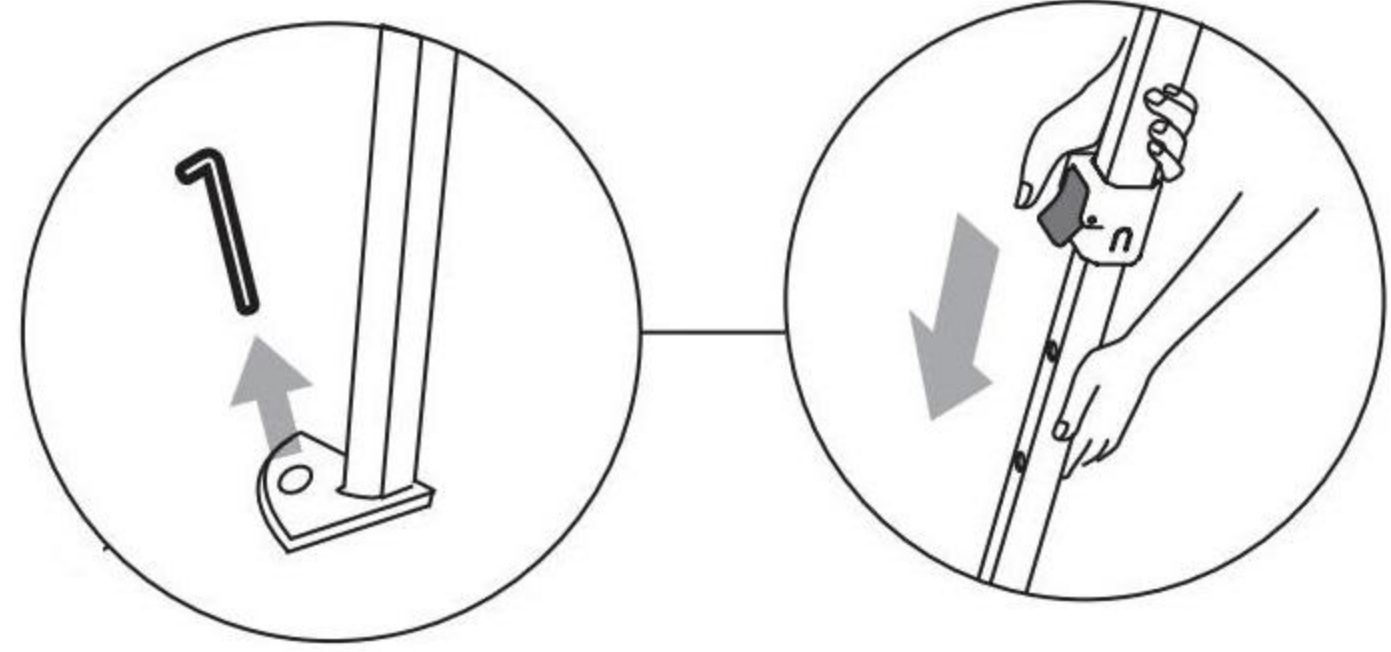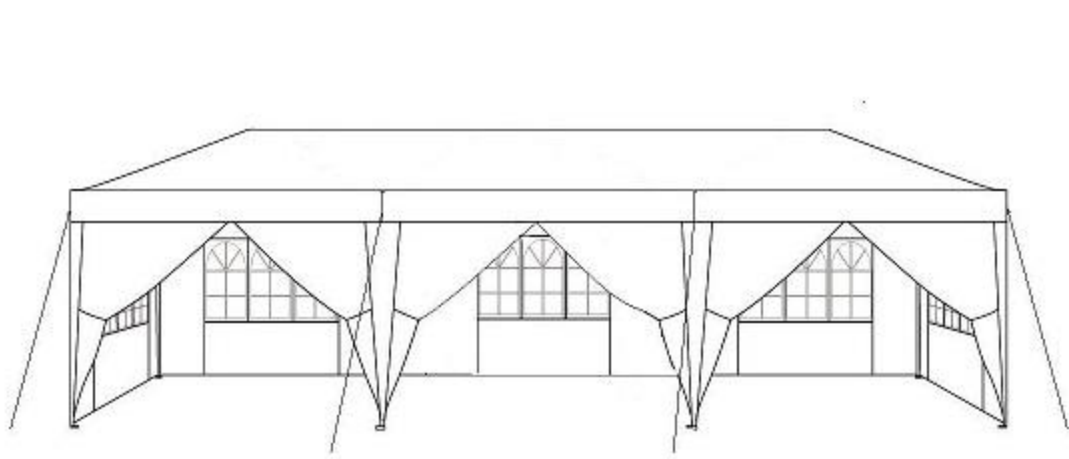


2. UNLOCKING THE FRAME

- Press the snap button and pull down the slider of each leg.

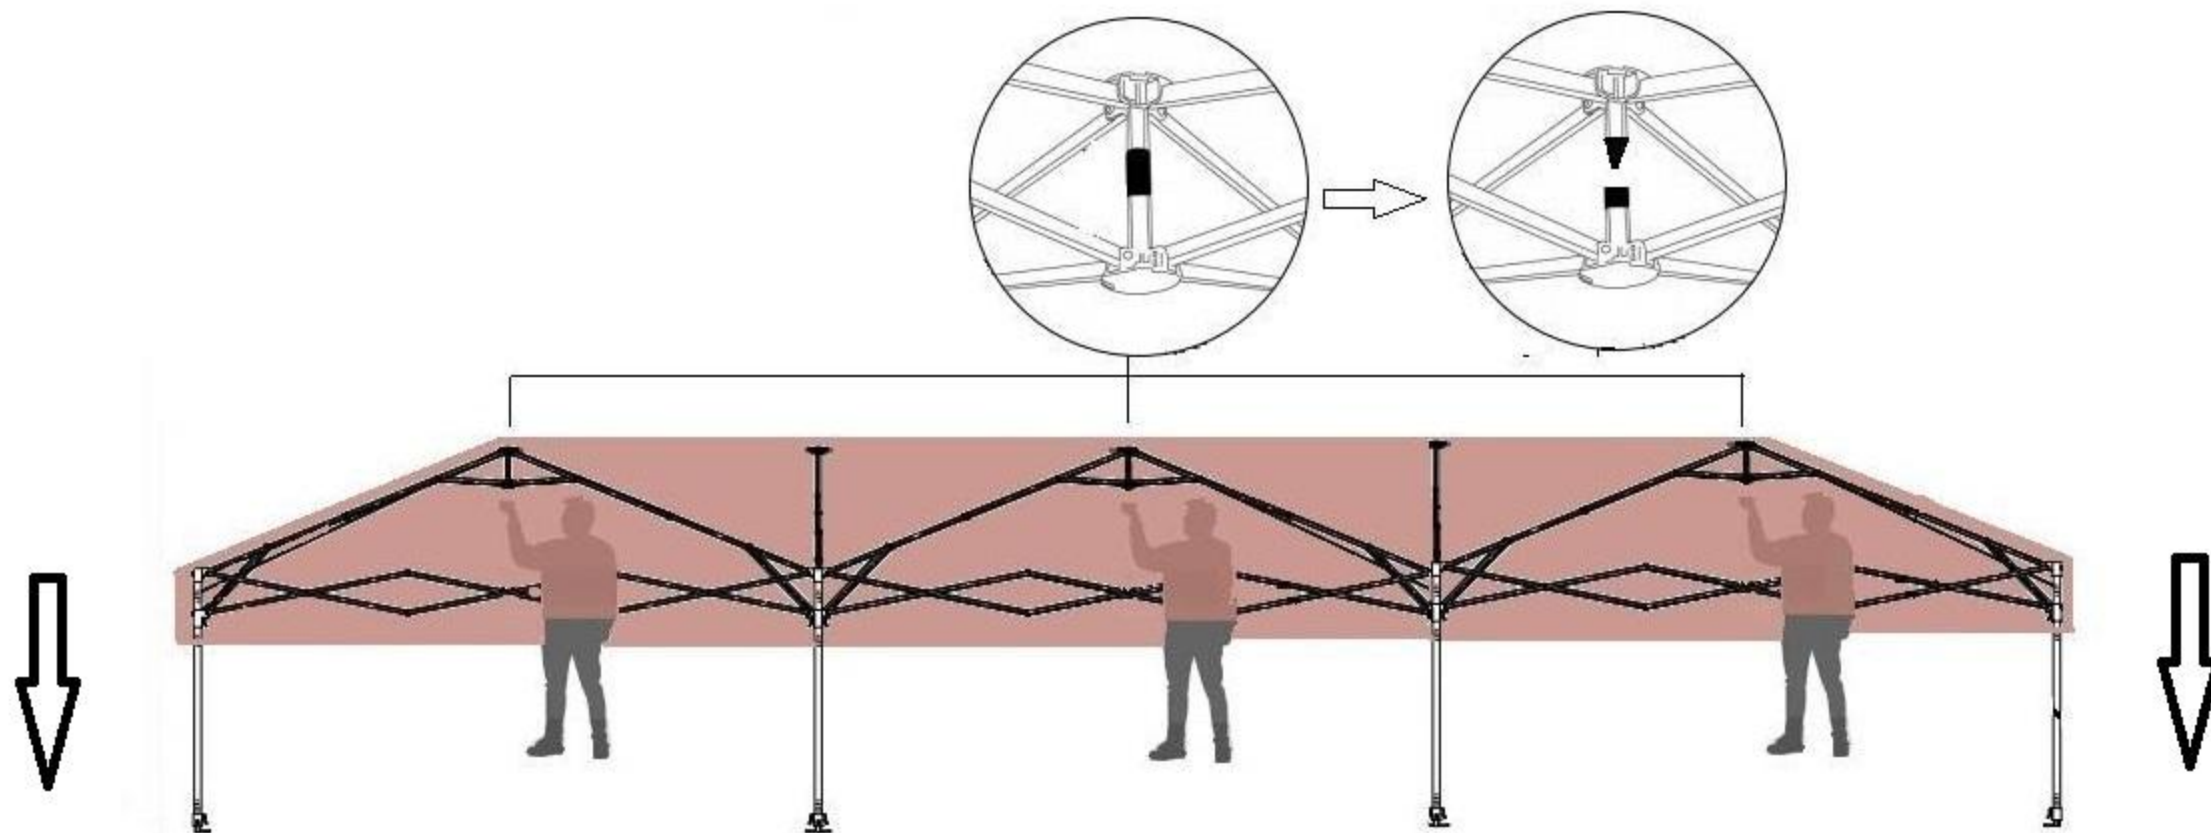

3. UNLOCKING THE FRAME

- Lift four legs up and squeeze the frame to fold up.

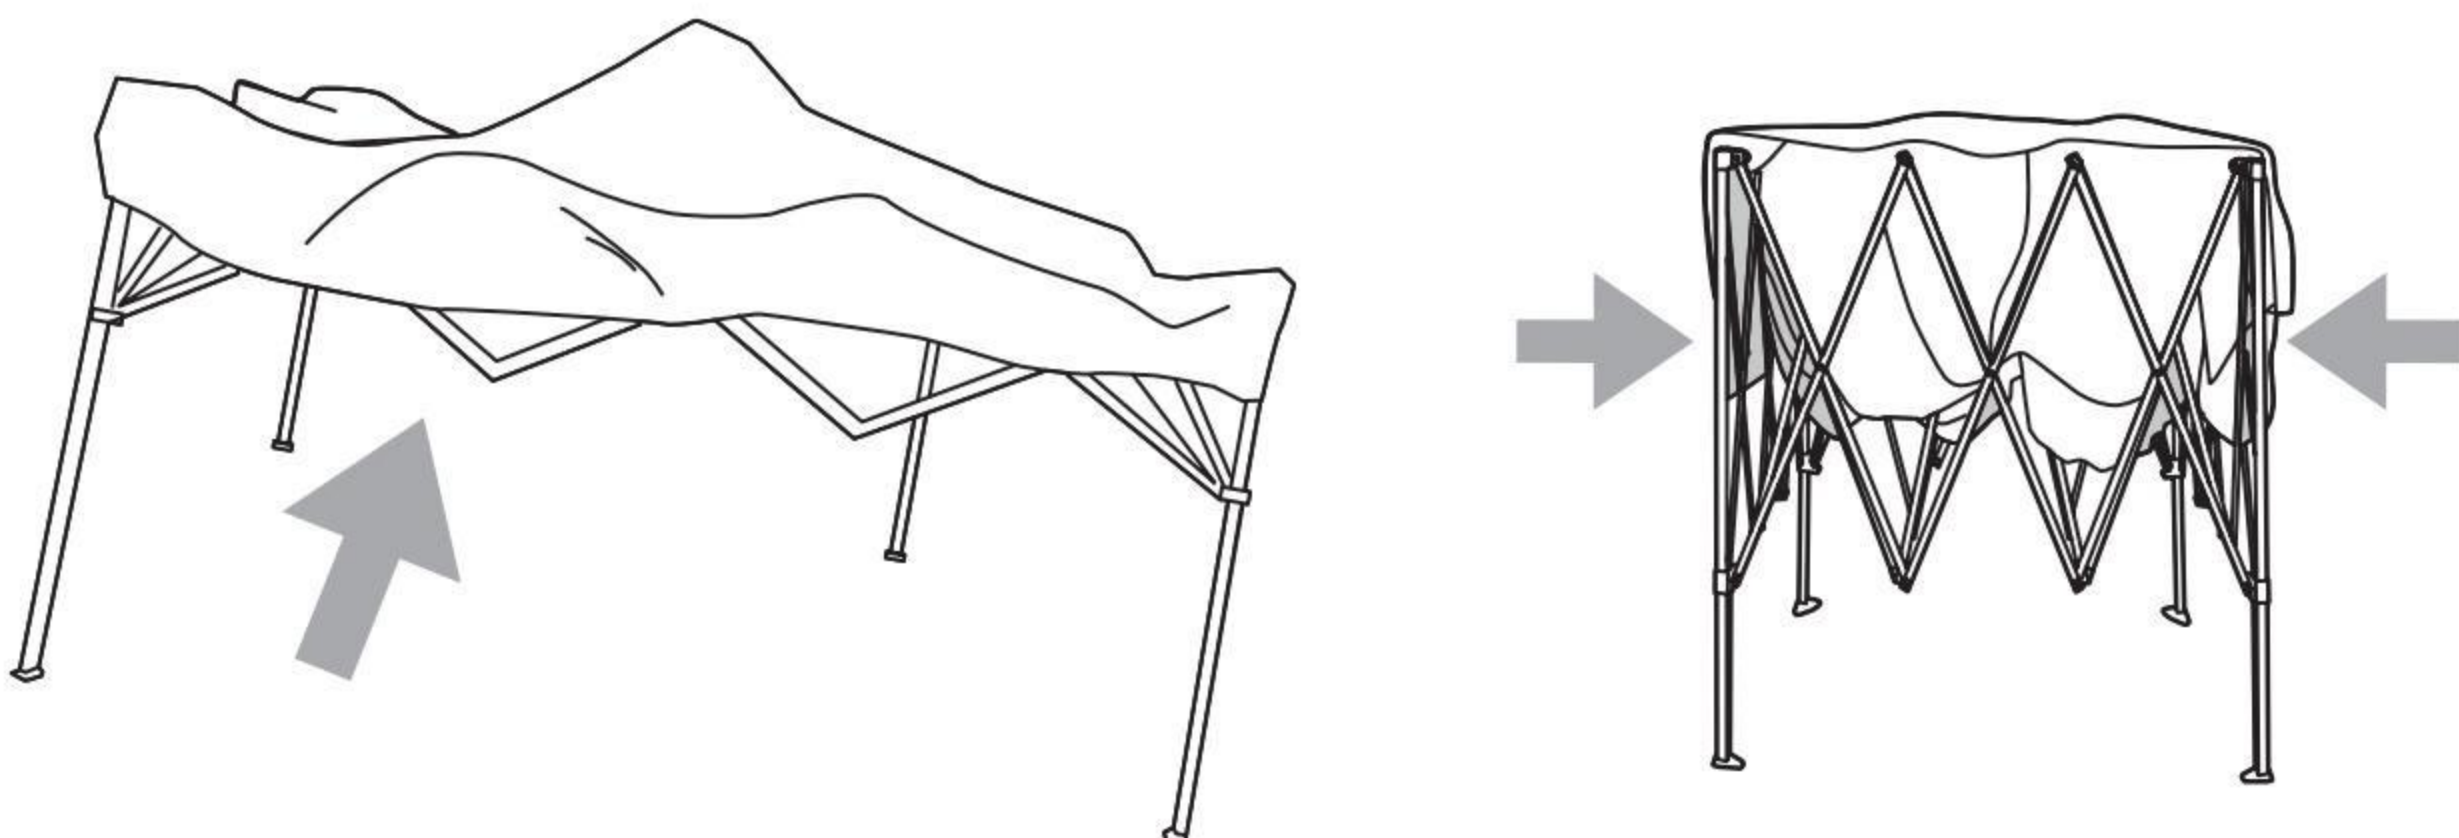

Acknowledgements

Dear customer,

Thank you for choosing OASISHOME . We commit to providing the best products and services to every customer.

If you have any inquiries or require further assistance, please contact our OASISHOME customer support via your account.

Your feedback and suggestions are always important and valuable to us.

Kindest regards,
Company Founder