


POP-UP CANOPY TENT

Instruction Manual

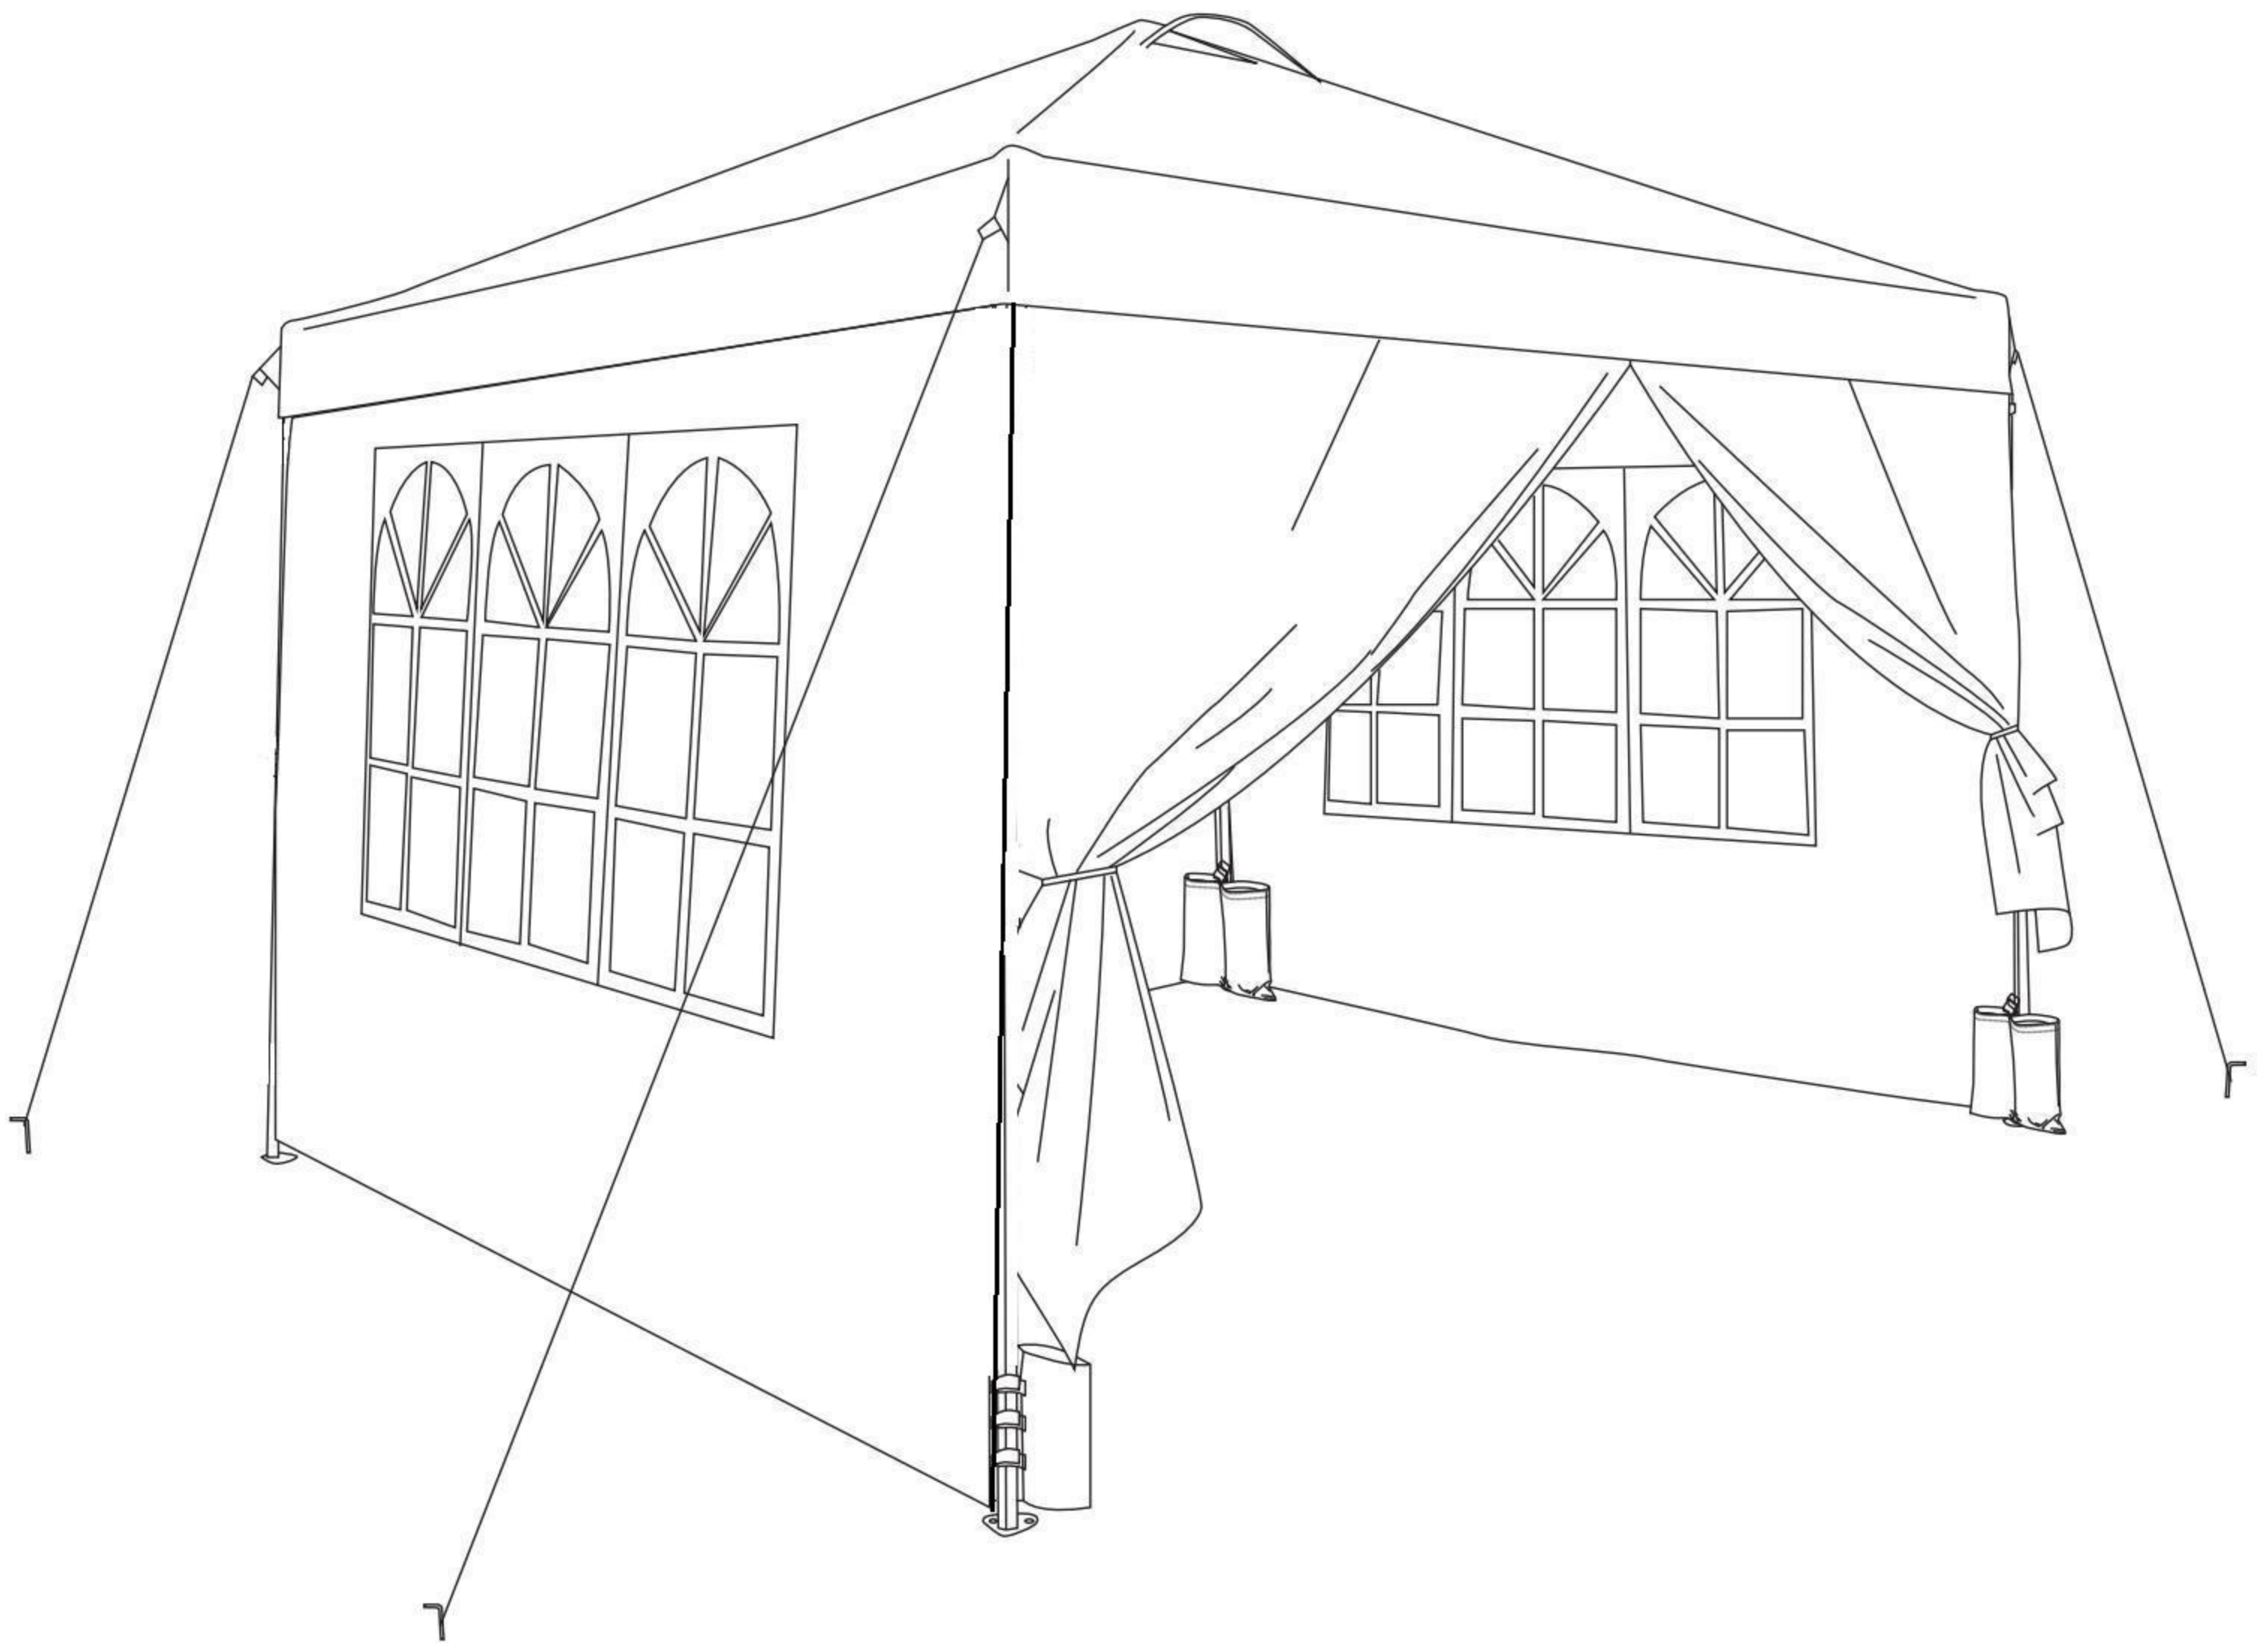


Note: Do not use this product in strong wind, rain or snow. We do not undertake the warranty for damage caused by improper use.

Read Before Assembly


1. Upon opening of the package, please check that all parts are included and that no damage has occurred during shipping. Please kindly note that, in order to ensure that the product arrives in good condition and avoid possible damage or deformation during transportation, we have reinforced the packaging.
2. Please read the instructions carefully before assembly. Be careful not pinching your fingers when setting up or shutting down the canopy.
3. Please set up the canopy with two or more people.
4. Keep this product away from flame or heat source. Do not cook, use fire-pits, use outdoor heaters, ignite firework under or close to the canopy.
5. Do not set up or use the canopy when there is heavy wind, raining or storm.
6. Please check all fixings regularly and re-tighten as necessary to ensure safety.
7. If you have any inquiry or need more help for our product and services, please contact our customer support via your account. [Amazon](#)

Parts


Canopy Frame×1pcs

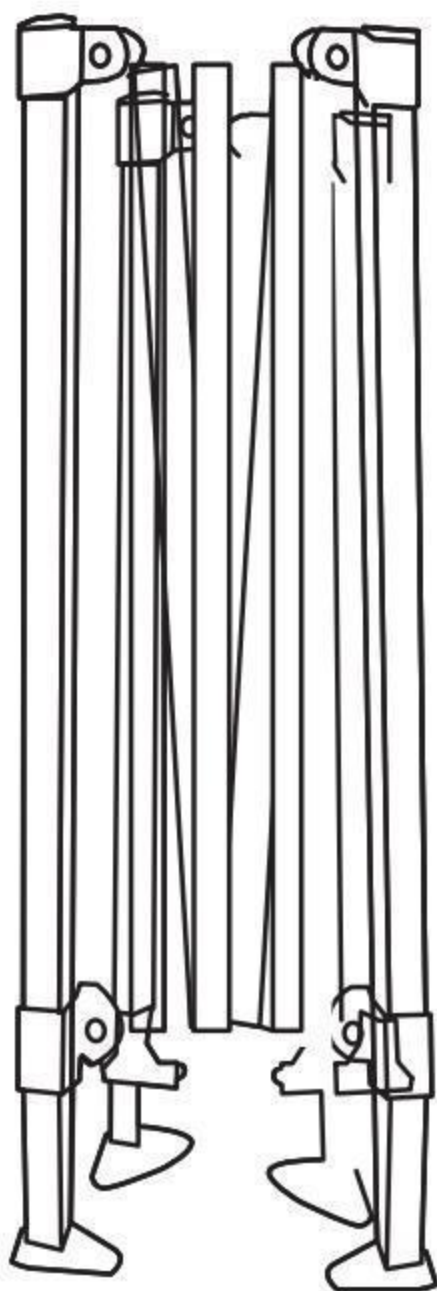


Canopy Top×1pcs

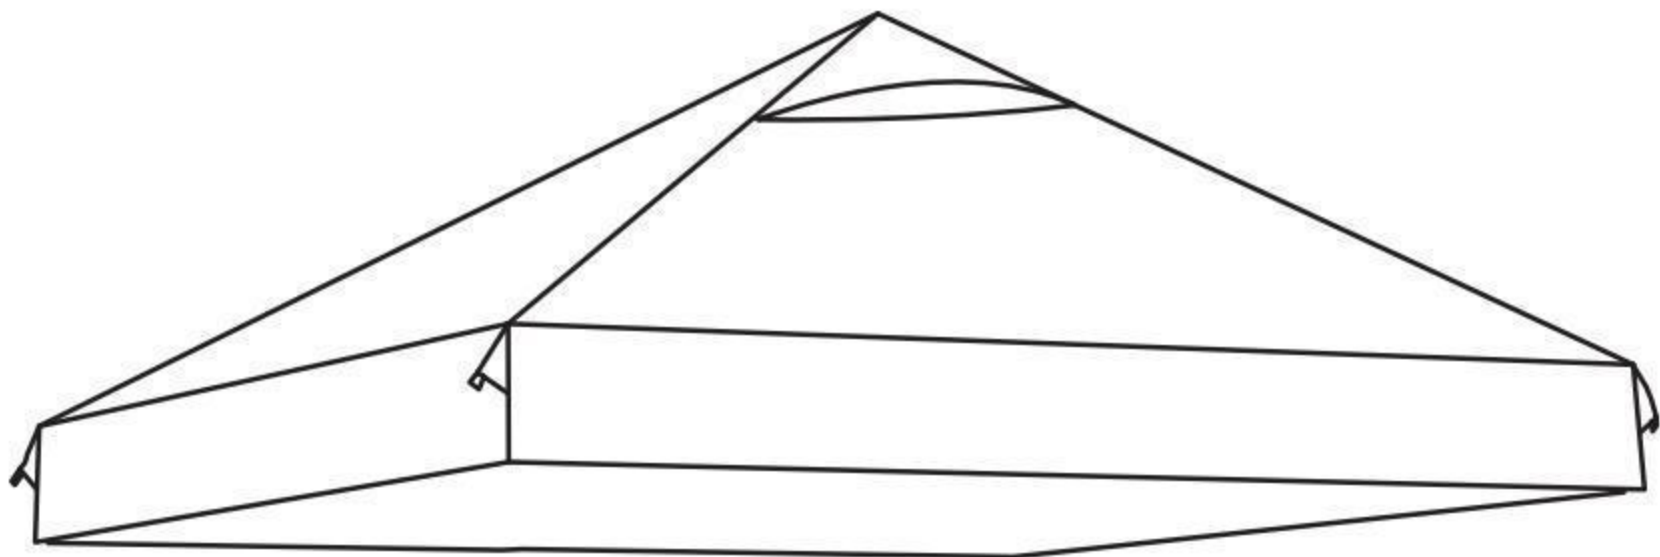


Wheeled Bag×1pcs

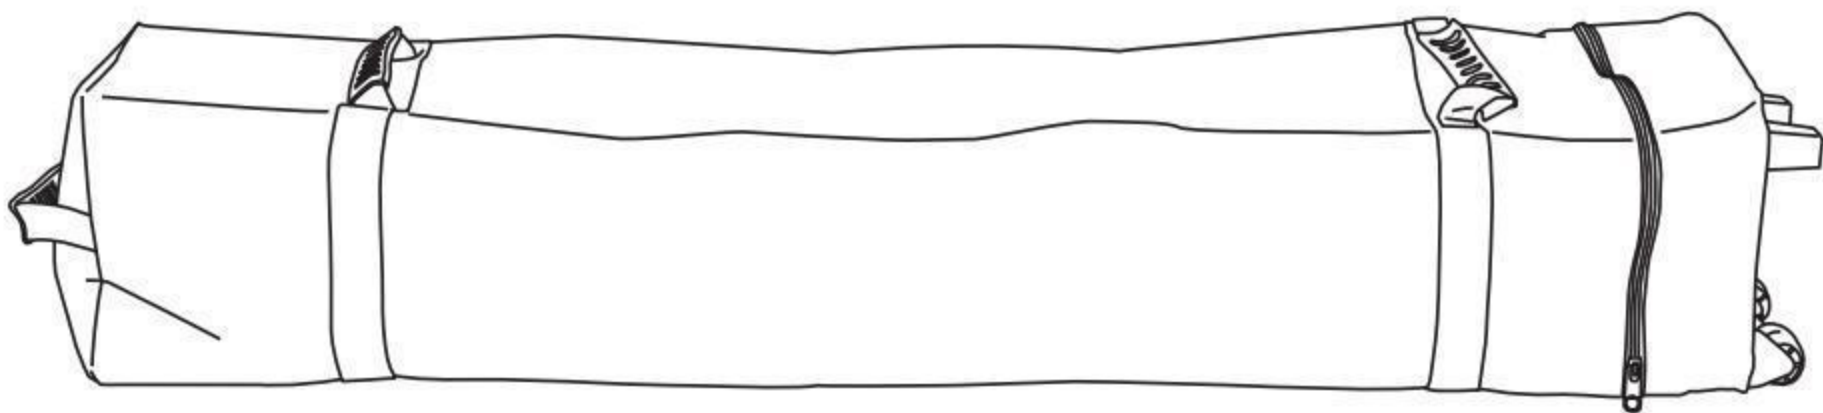


Sandbag×4pcs

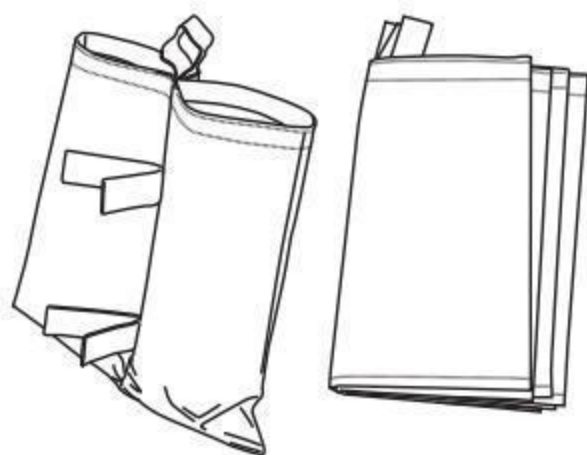


Tent Stake×8pcs

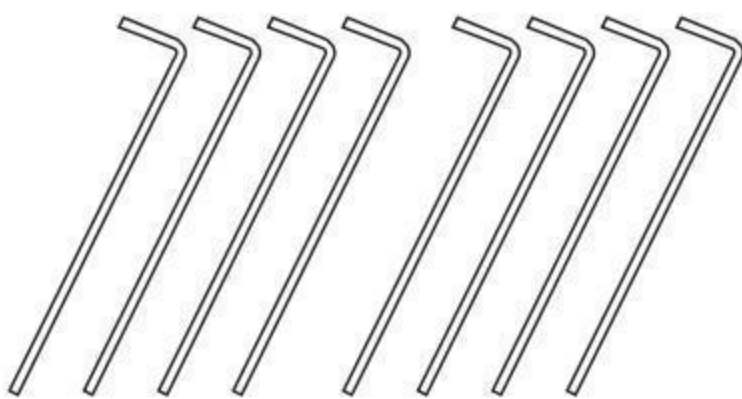


Rope×4pcs

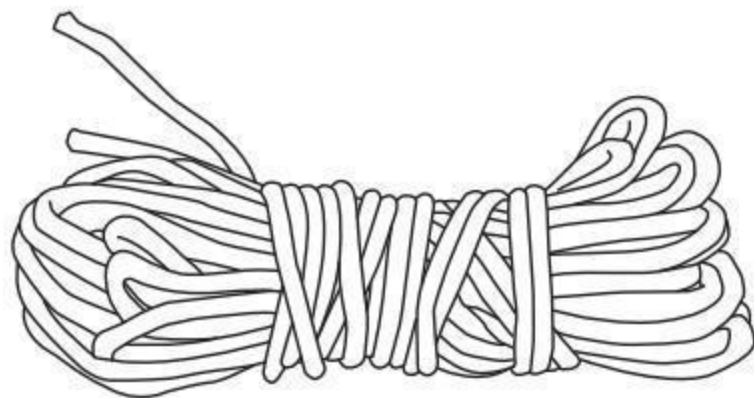

Sidewall with Zipper×2pcs

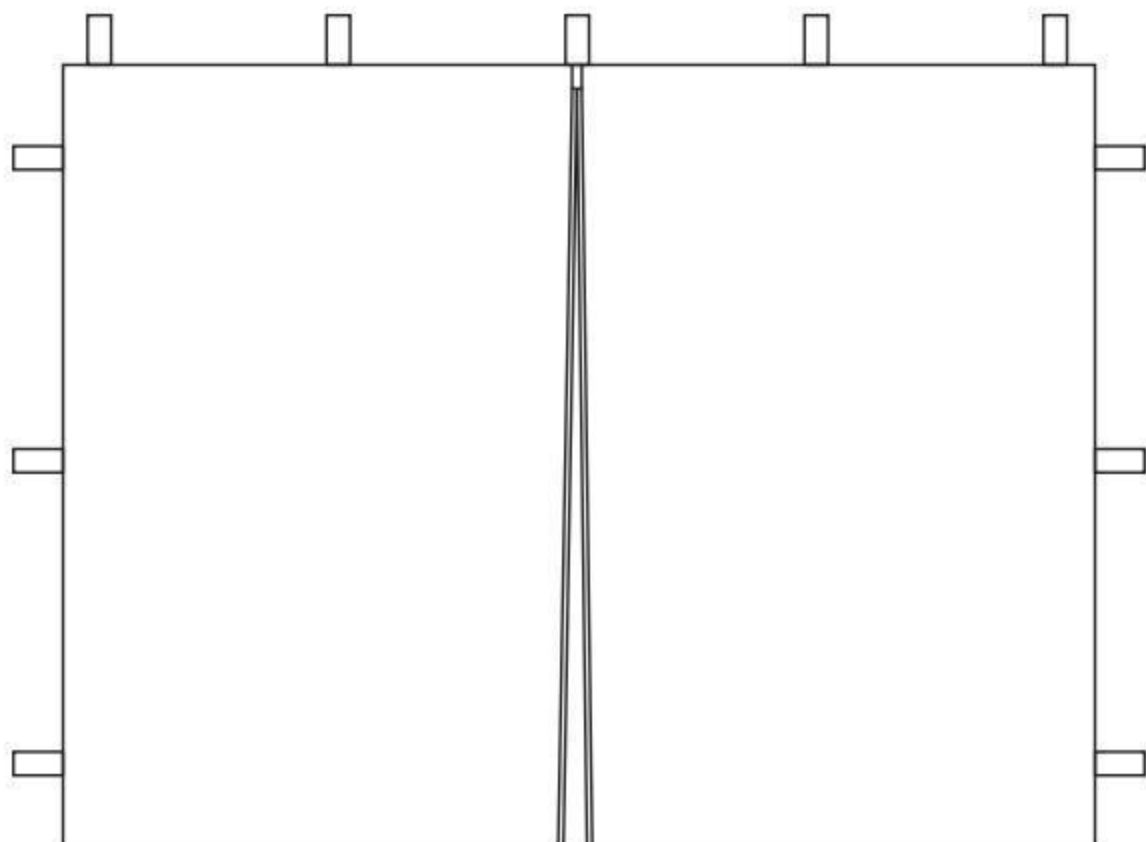


Sidewall with Window ×2pcs

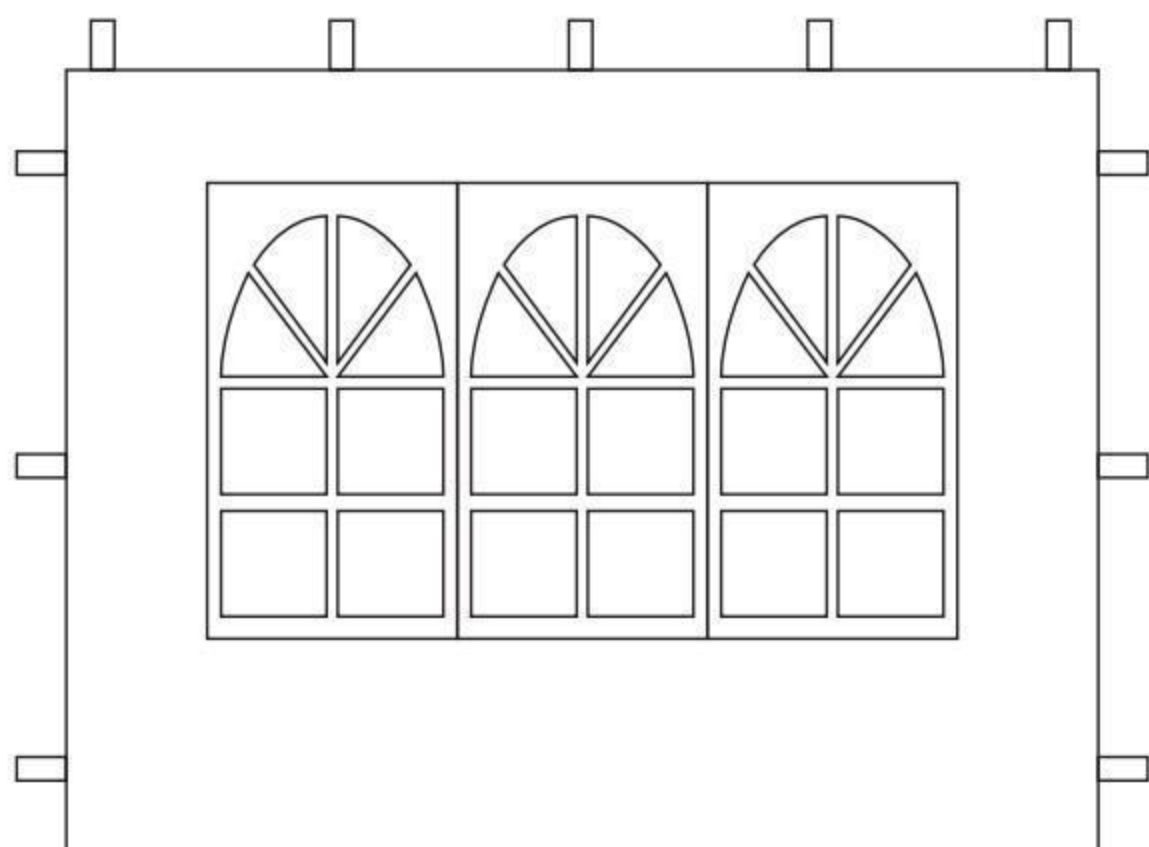

Setting Up the Canopy (Mind not pinching fingers)


1、 UNFOLDING THE FRAME AJAR

- Unfold the frame ajar by pulling the frame from each end. (*Mind not pinching fingers.)

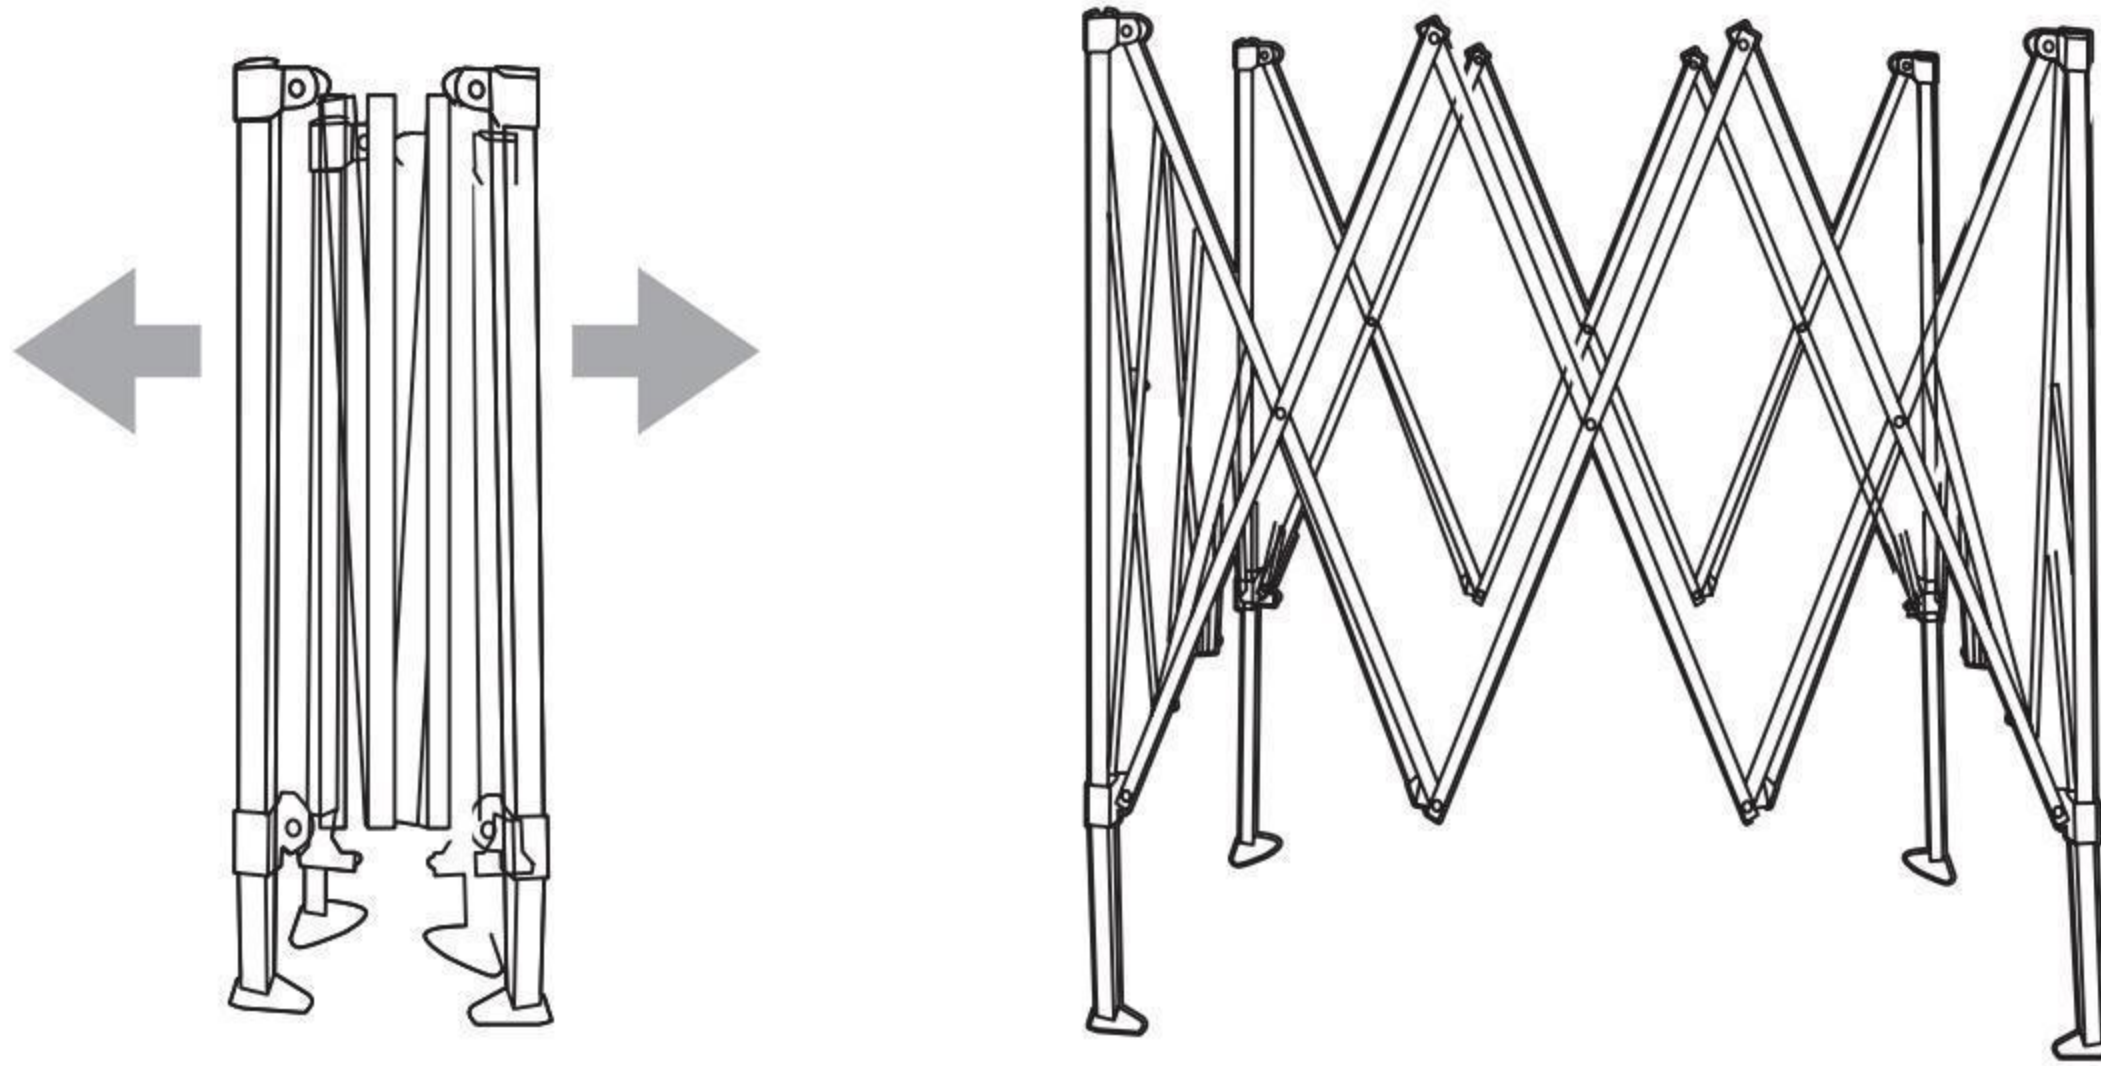


2、 ATTACHING THE CANOPY TOP

- Unfold the sheet of fabric and place it on top of the frame.
- Secure the canopy top to the corners of the canopy frame using the Velcro connections.

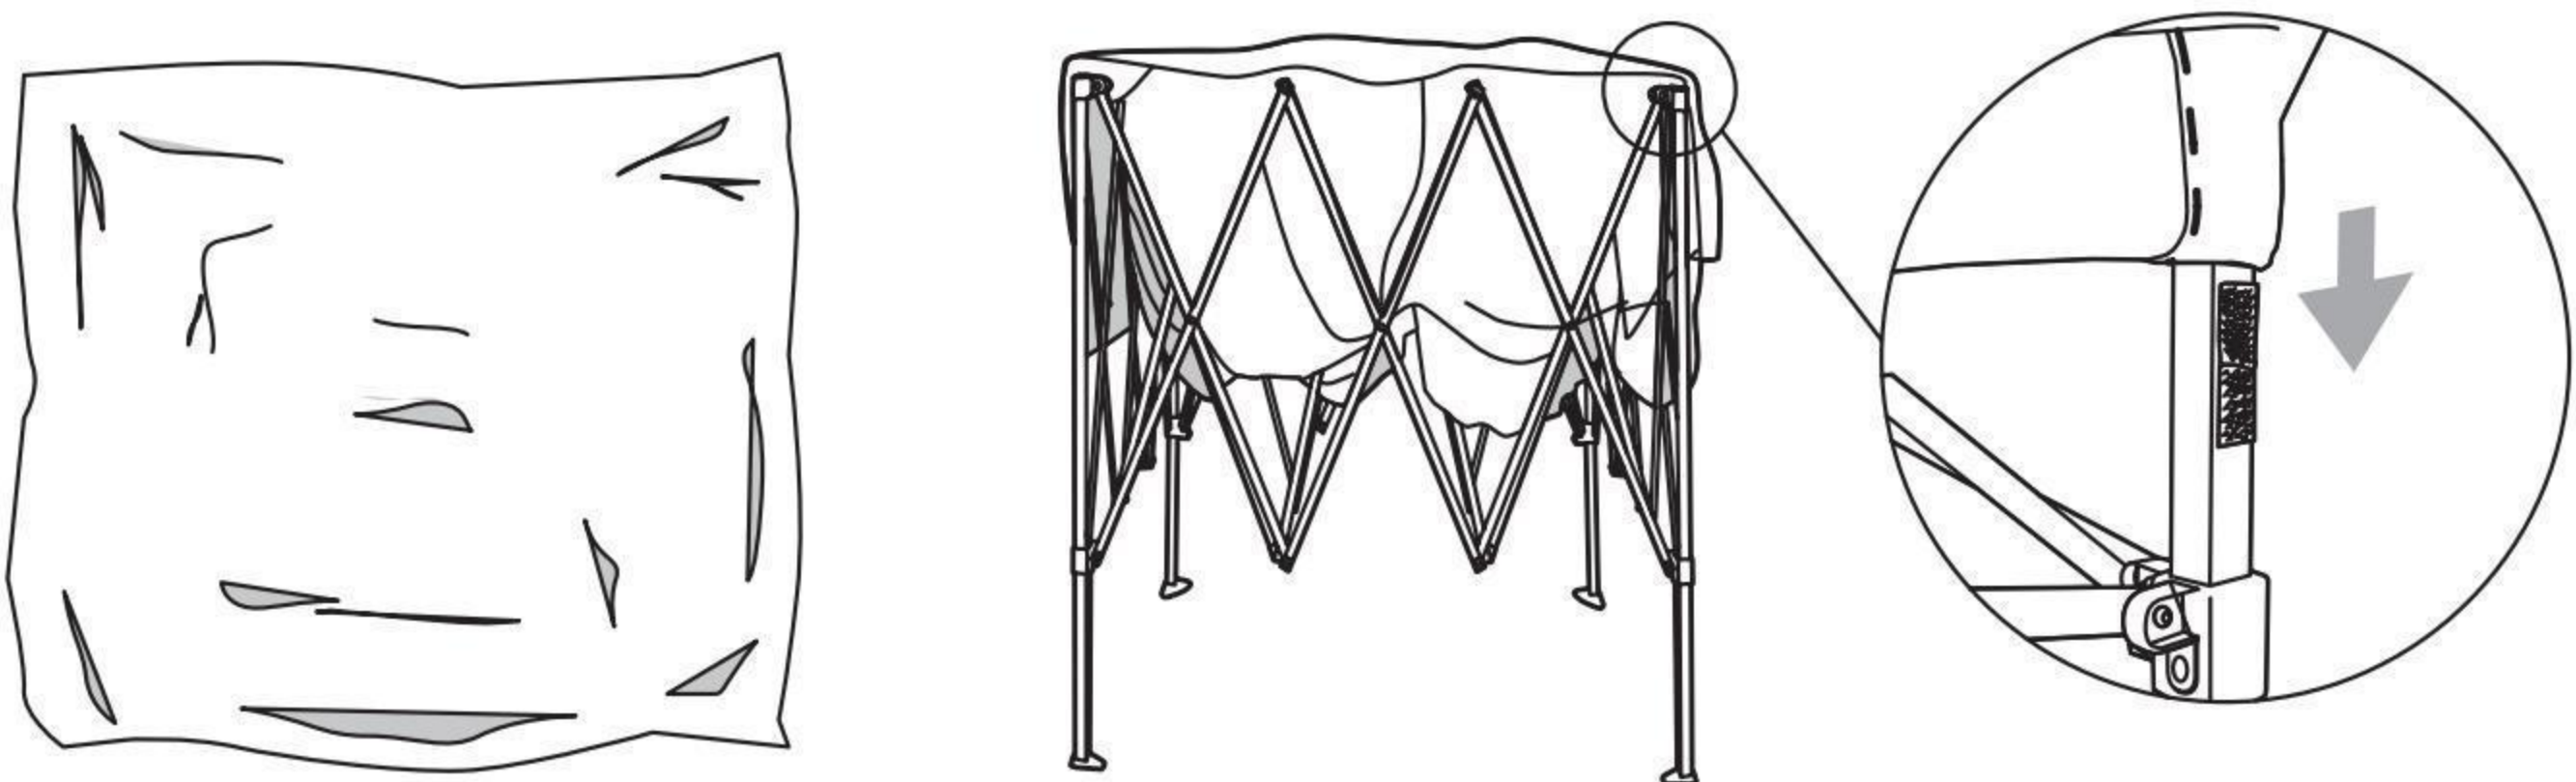

3、 UNFOLDING THE FRAME FULLY

- Unfold the frame fully by pushing the legs' sliders up. The sliders will be secured if the frame is fully unfolded. (*Mind not pinching fingers. Do not stretch the inner leg at this moment.)
- Finish attaching the canopy top to the canopy frame using the Velcro loops inside.

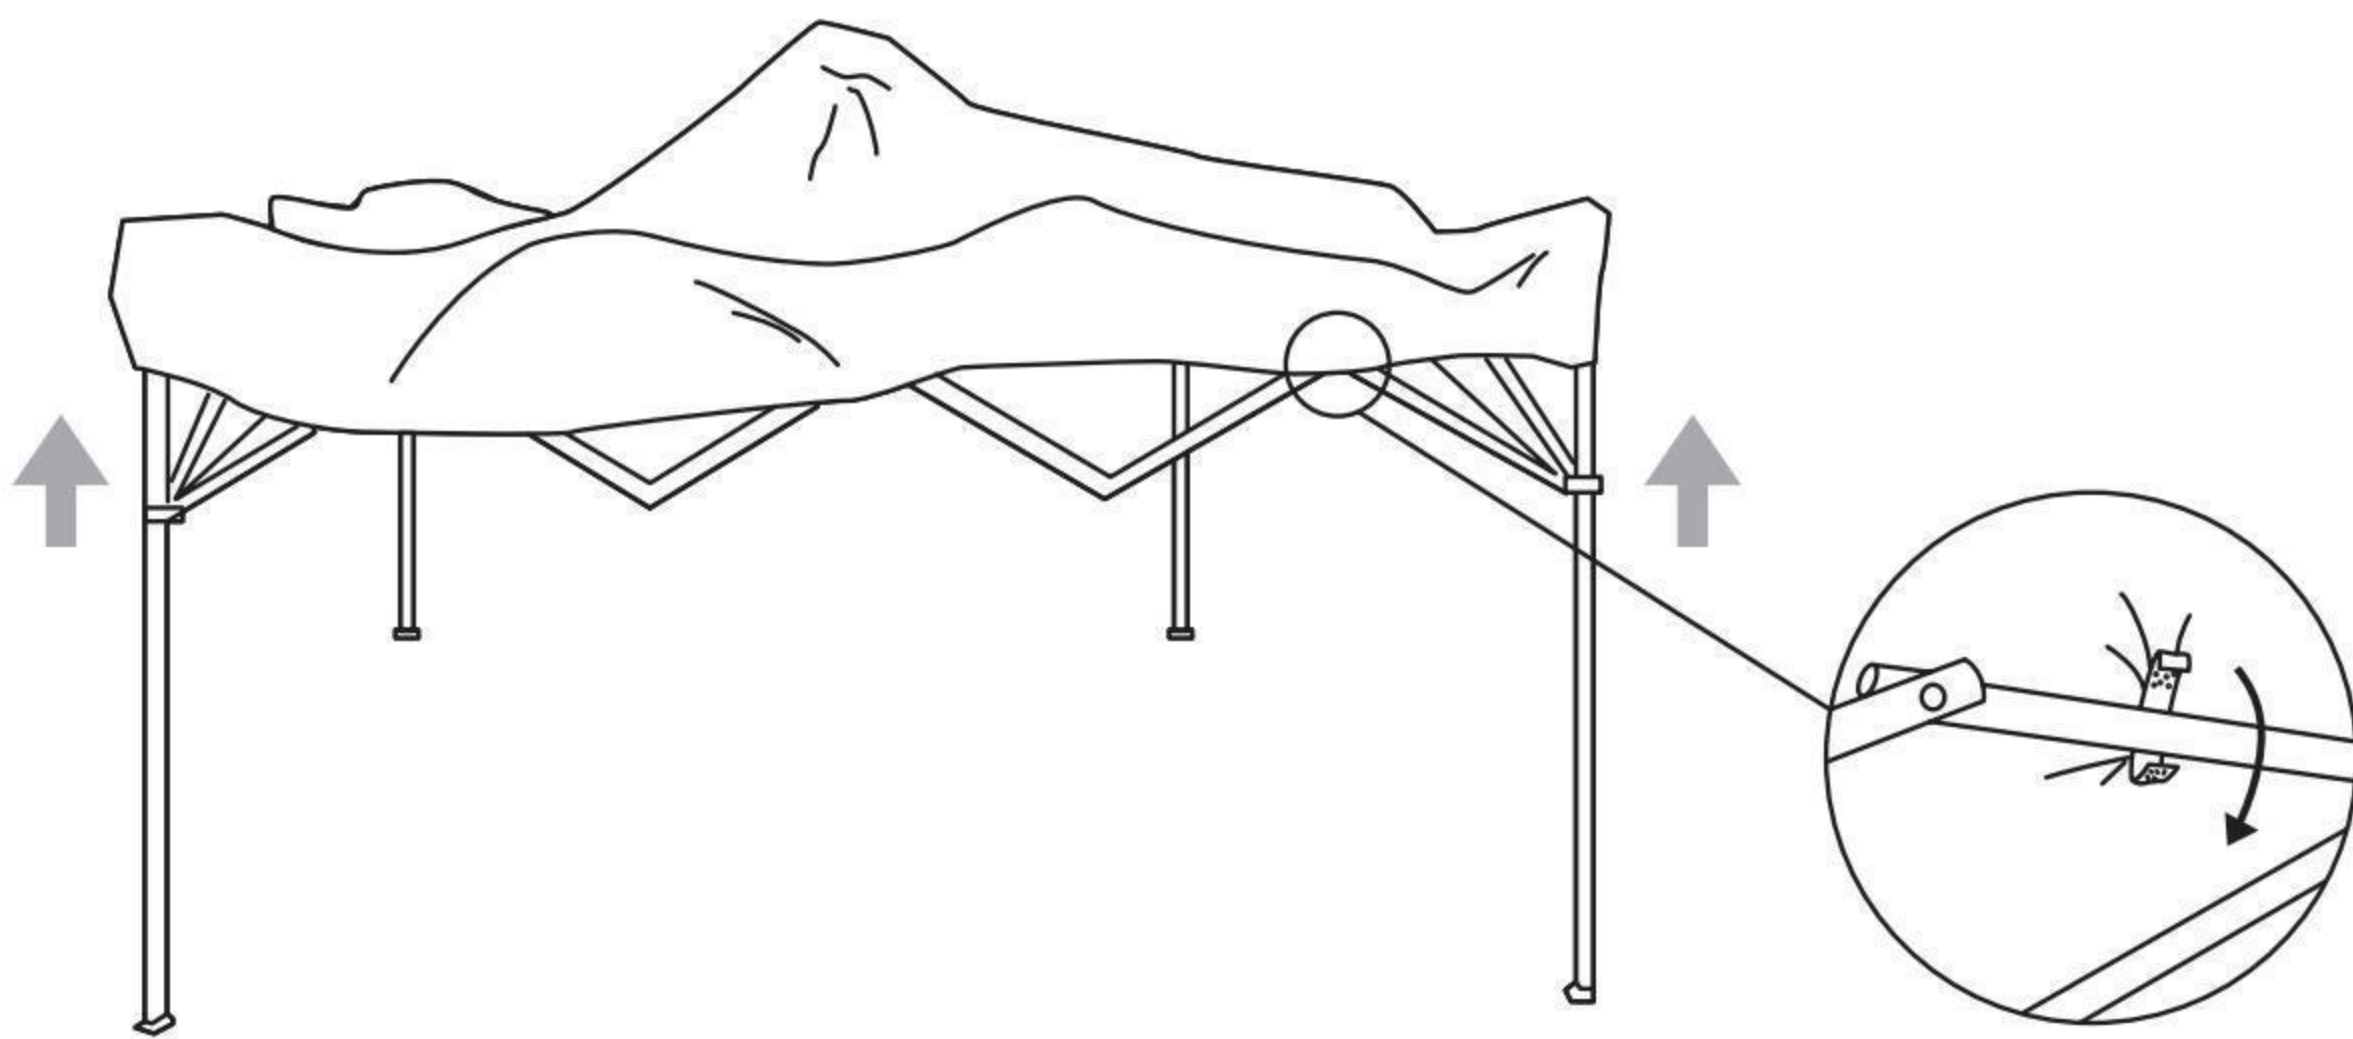


4、 ADJUSTING THE CANOPY HEIGHT

- There are three height adjustment holes in the inner leg. Press the button on each leg and raise or lower the height of the canopy. (*Mind not pinching fingers.)




5. ATTACHING THE CURTAIN

- Attach the sidewalls by tying up the Velcro straps around the frame of the canopy. Do not tie the Velcro too tight.

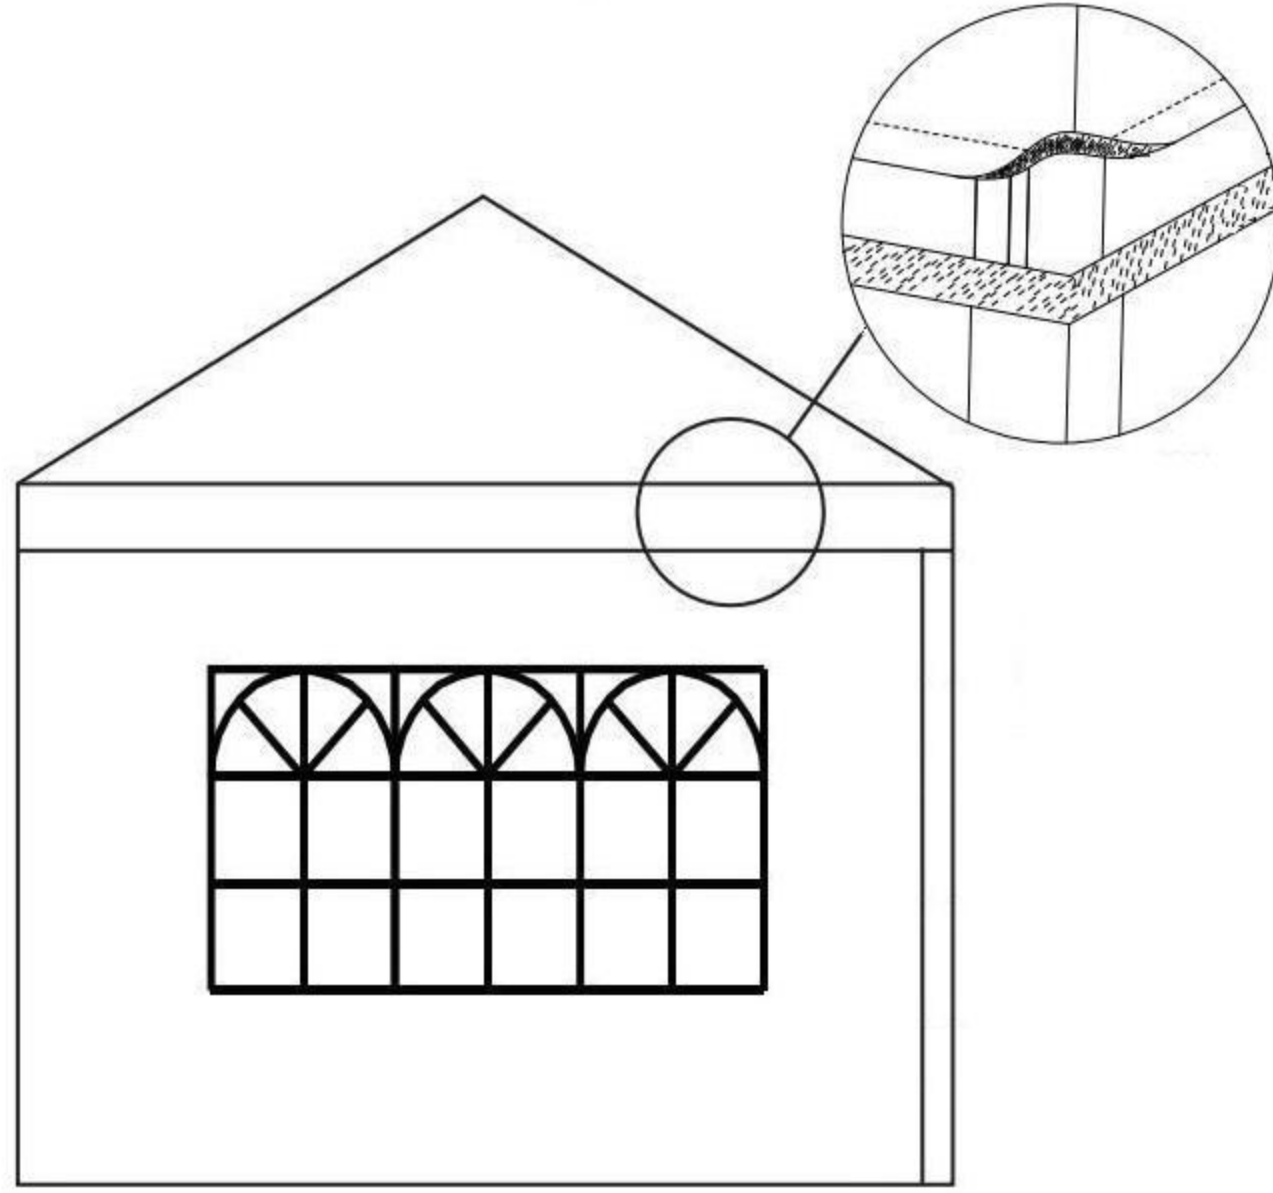

6. SECURING THE CANOPY IN PLACE


- Insert a stake into the foot of each canopy leg.
- Secure four stakes to the ground at a proper distance from the canopy. Tie the canopy's ropes to the stakes. Ensure appropriate tension on the rope.
- Fill up the sandbags and fix them to each leg.

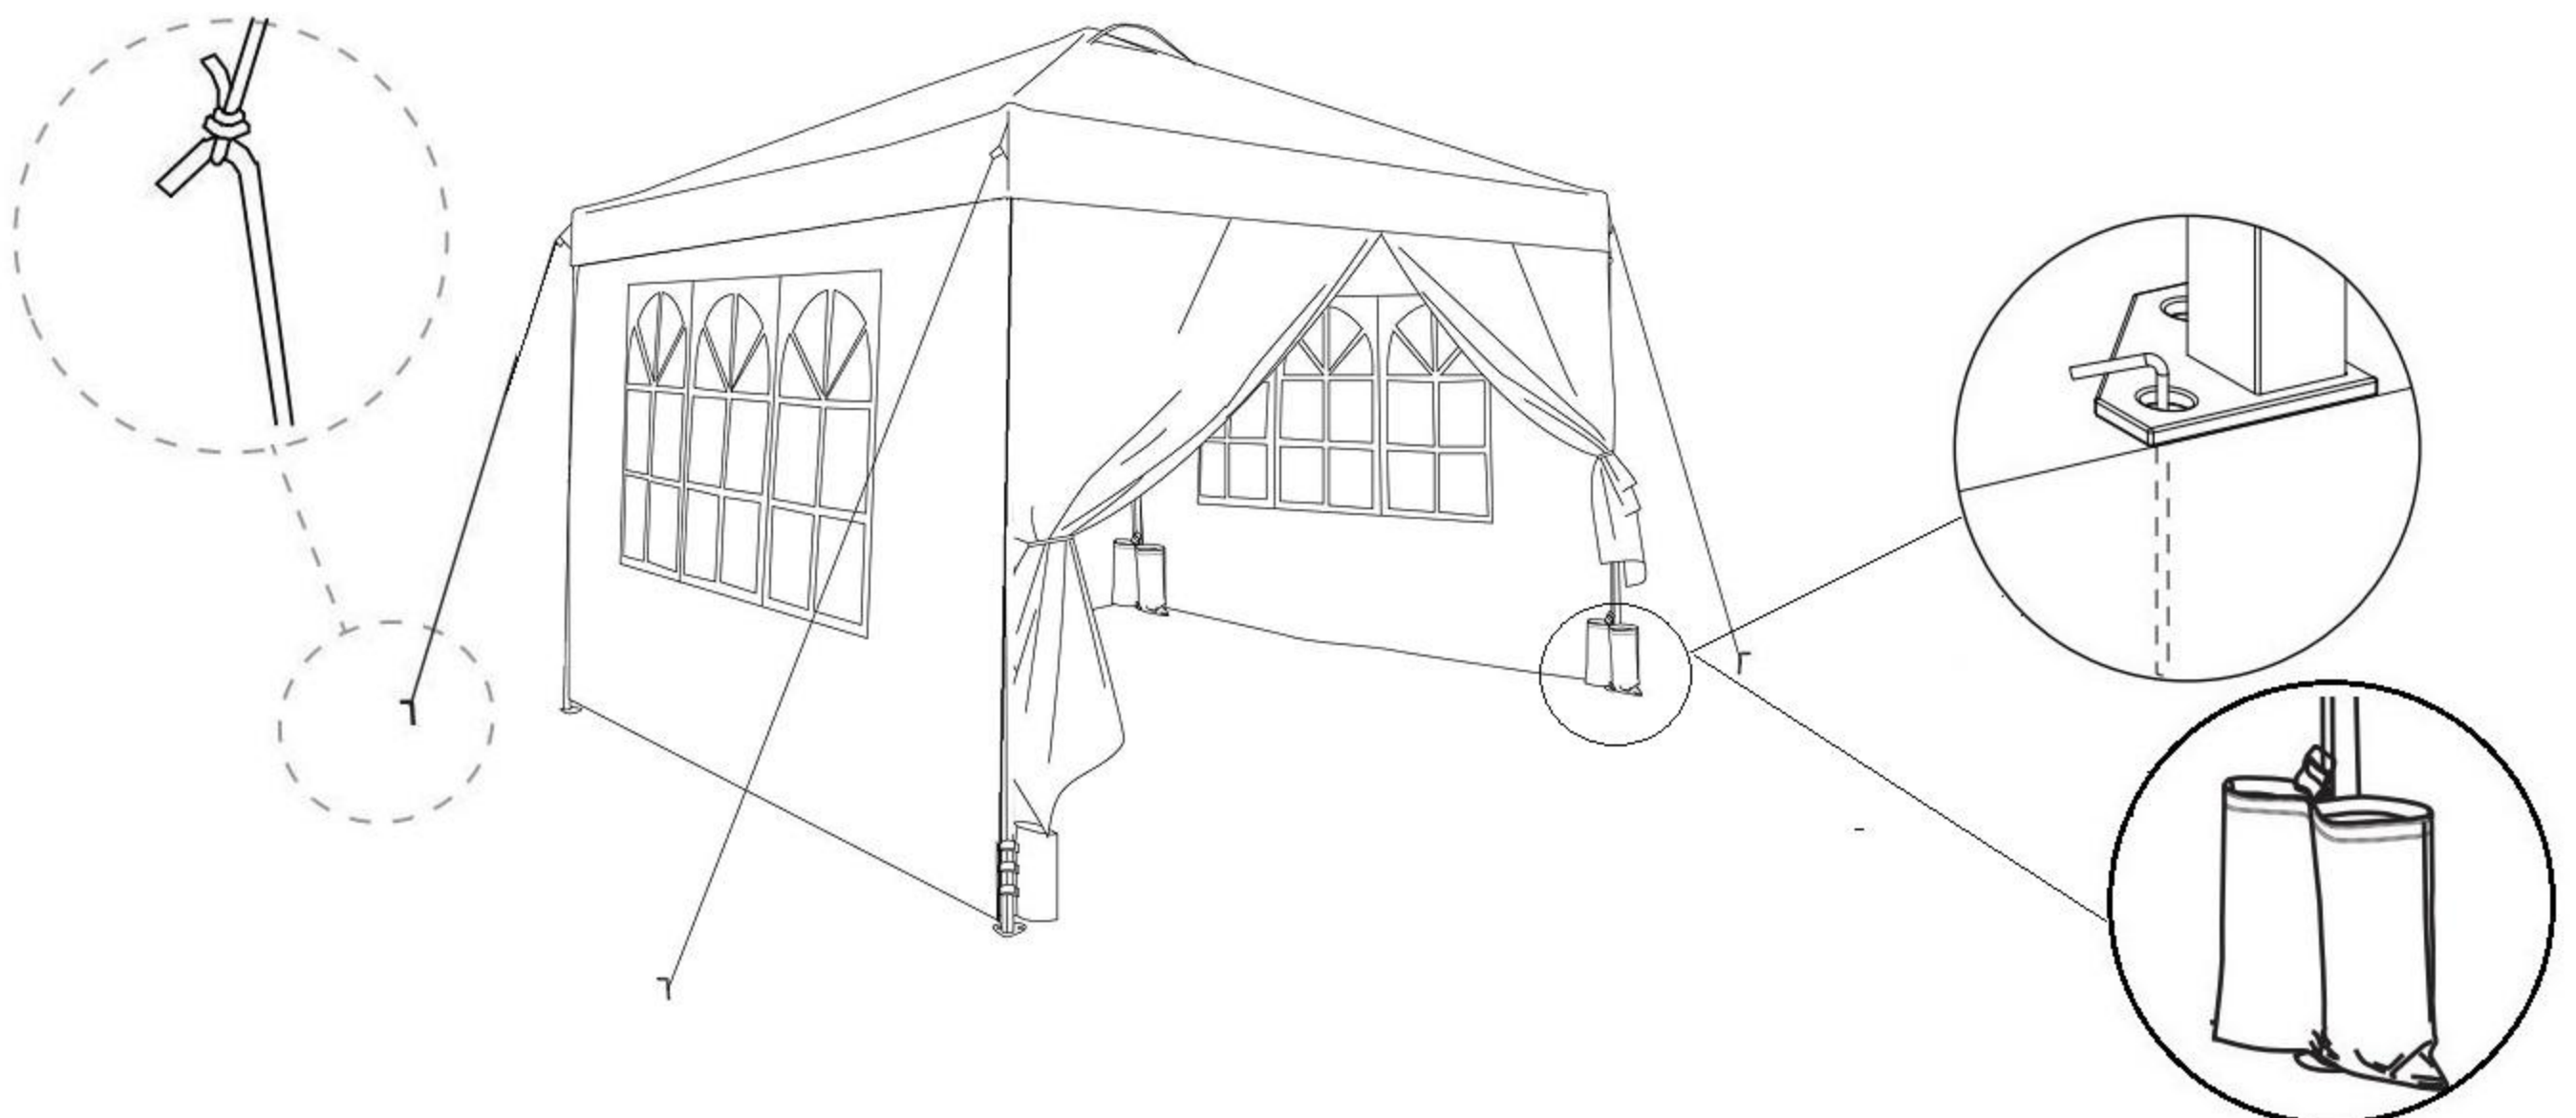

Taking Down the Canopy (Mind not pinching fingers)


1. REMOVING THE STAKES AND RETRACT THE LEGS

- Untie the sandbags and pull the stakes from the ground.
- Press the push button on each leg and retract the legs to their original height. (*Mind not pinching fingers.)

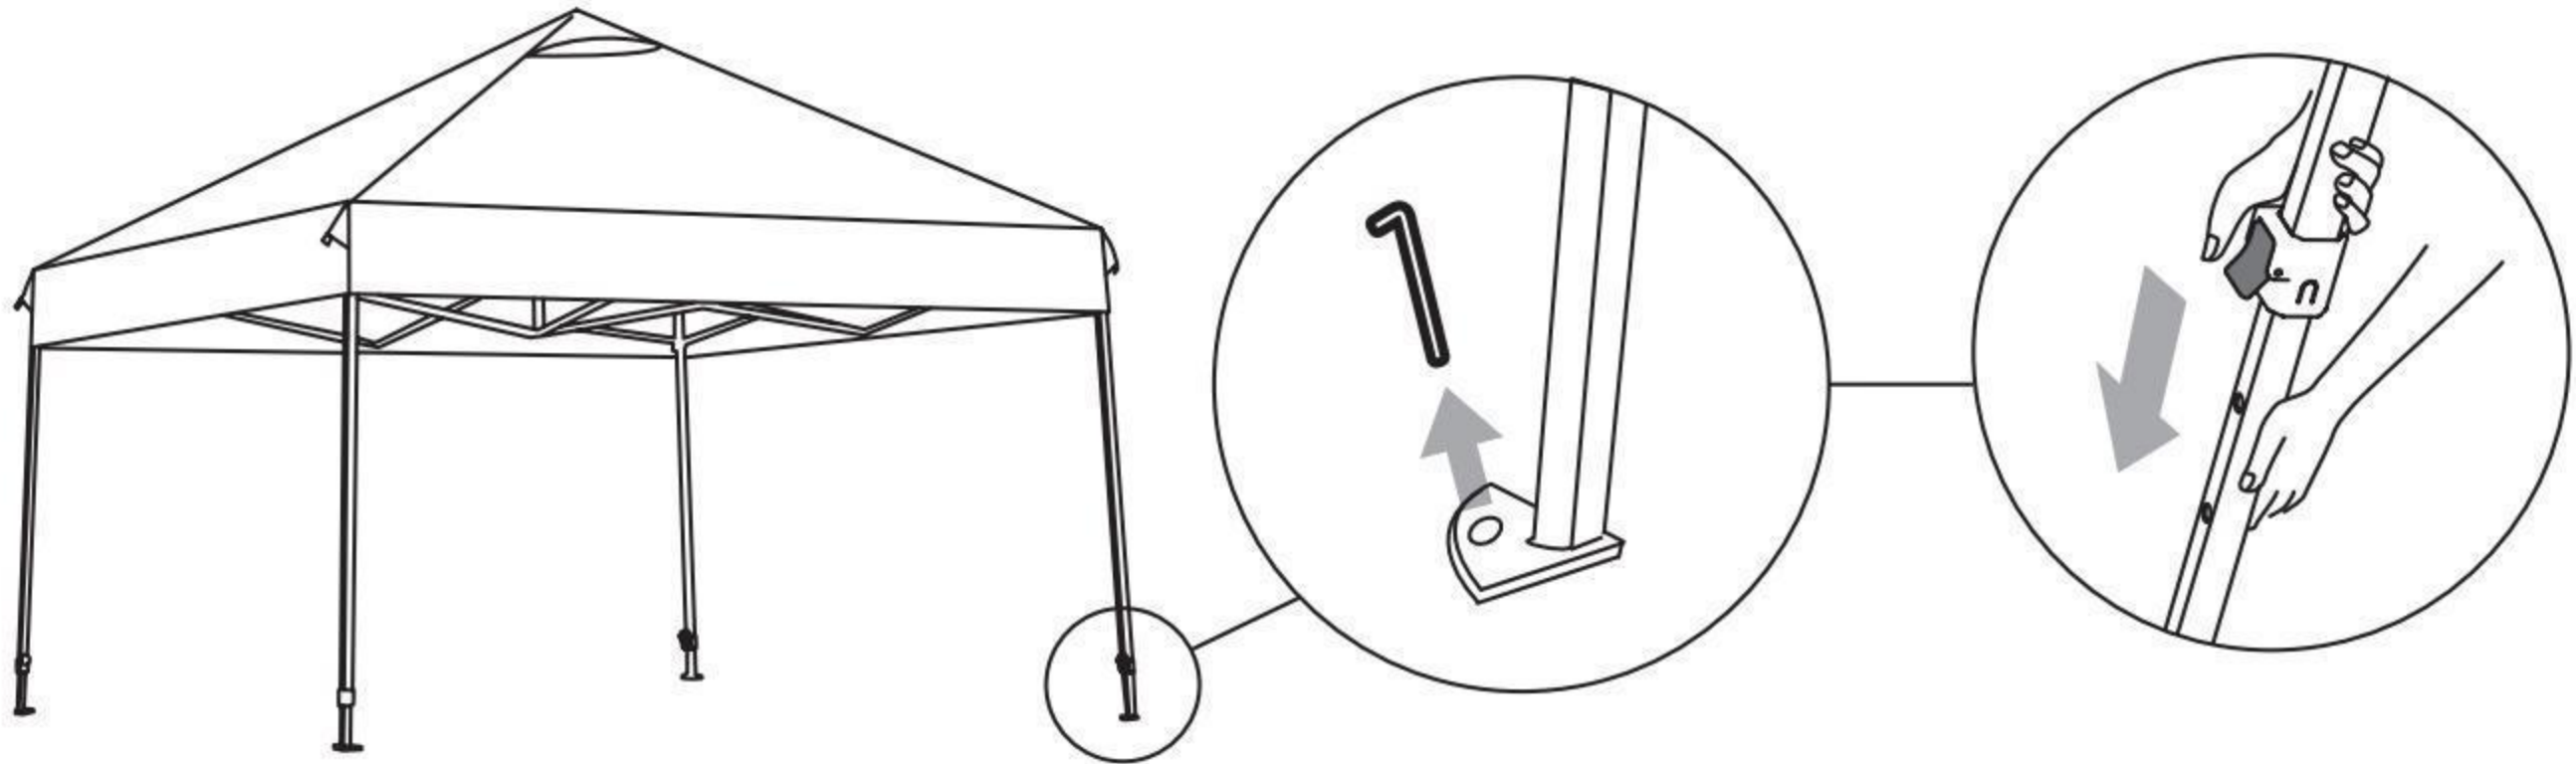


2. UNLOCKING THE FRAME

- Press the snap button and pull down the slider of each leg. (*Mind not pinching fingers.)

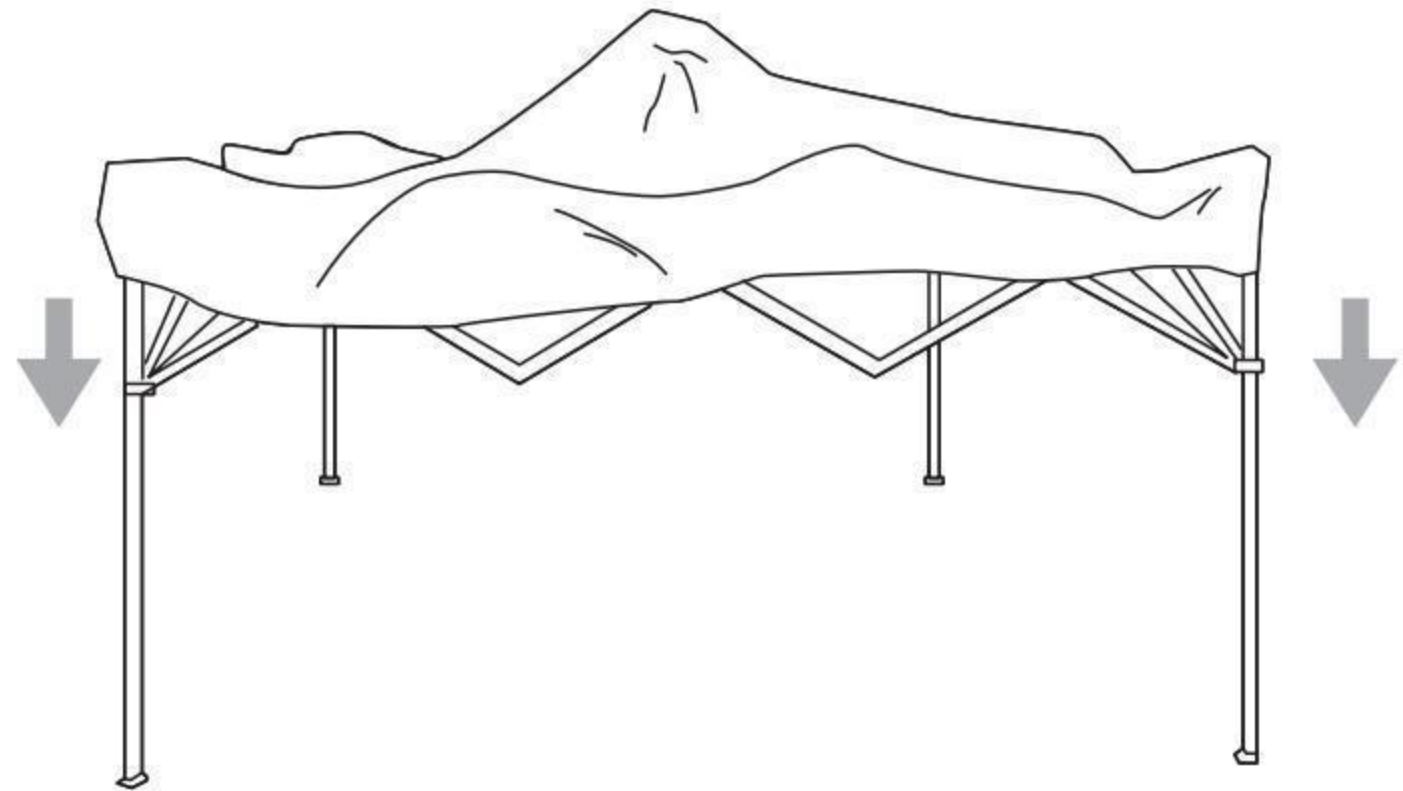

3. UNLOCKING THE FRAME

- Lift four legs up and squeeze the frame to fold up. (*Mind not pinching fingers.)

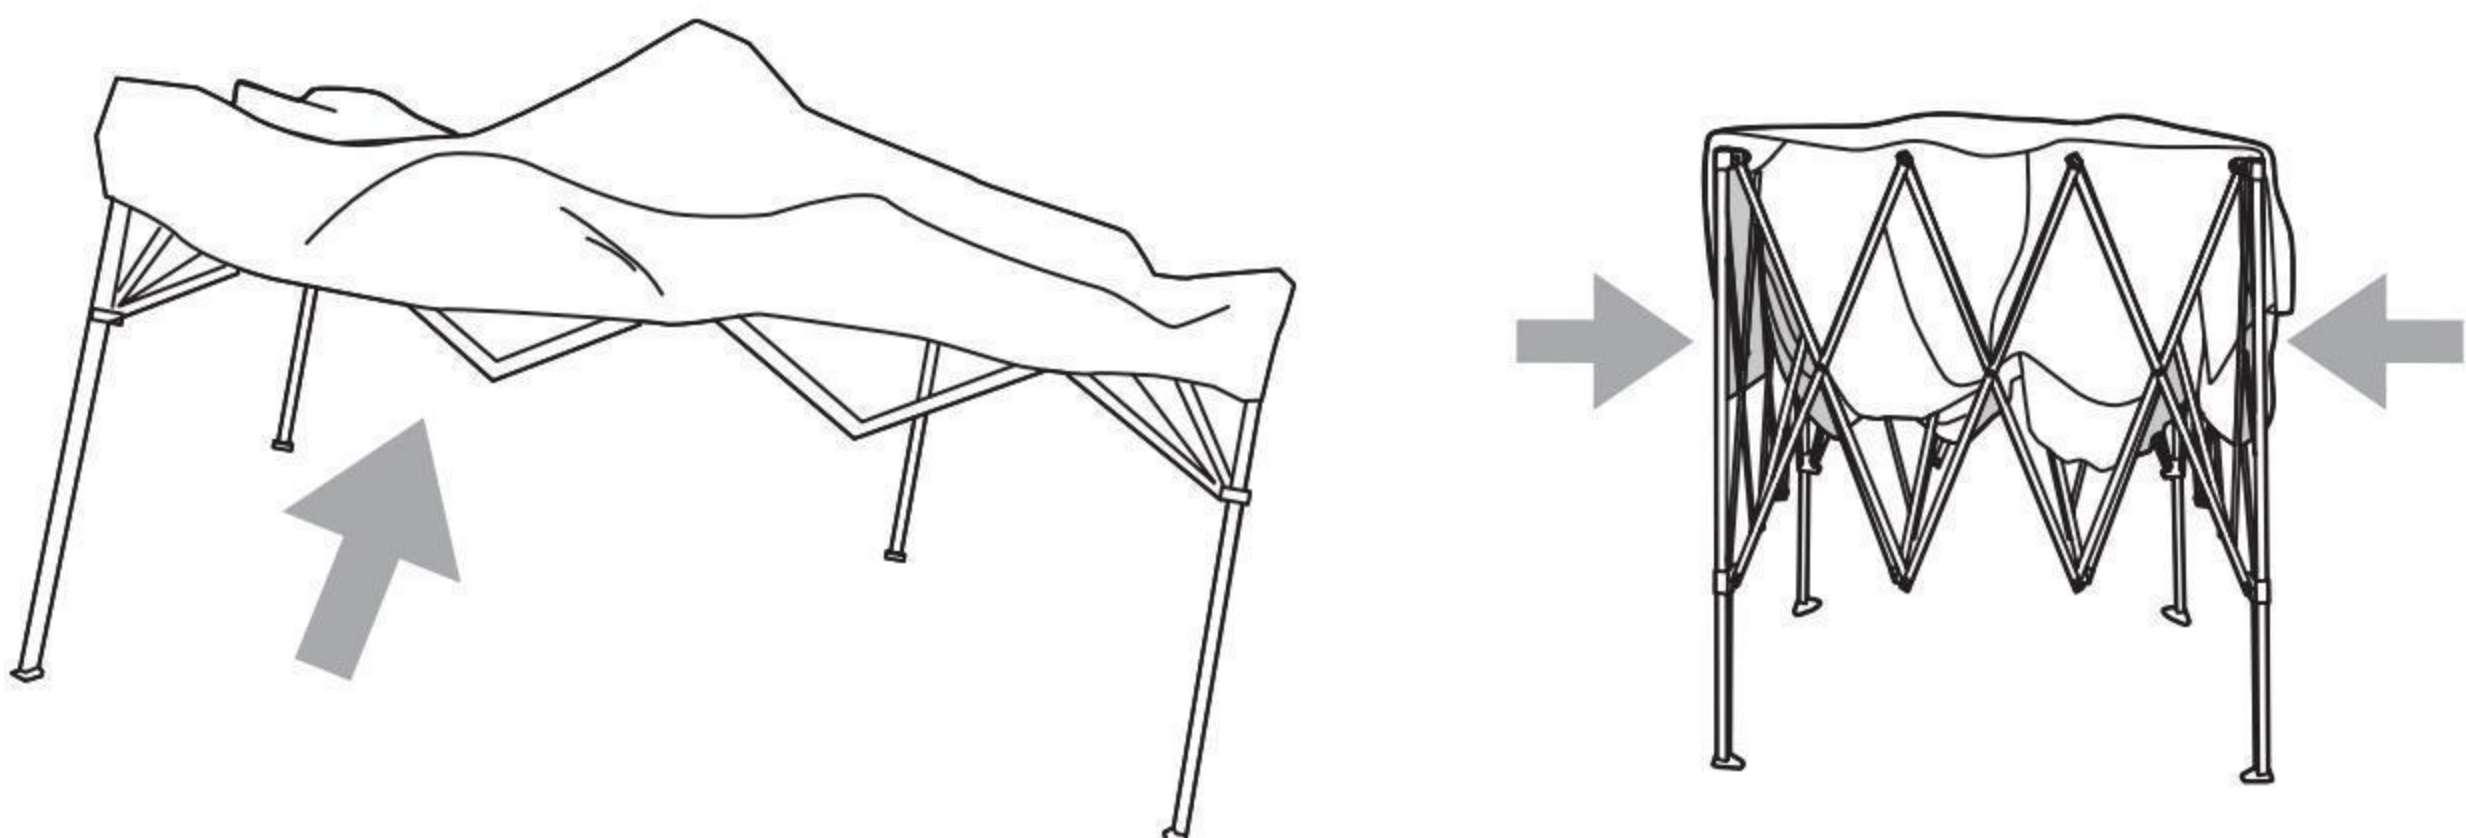

Acknowledgements

Dear customer,

Thank you for choosing OASISHOME . We commit to providing the best products and services to every customer.

If you have any inquiries or require further assistance, please contact our OASISHOME customer support via your account.

Your feedback and suggestions are always important and valuable to us.

Kindest regards,
Company Founder